 


DREO

2-in-1 Tower Heater Fan MC706

USER MANUAL

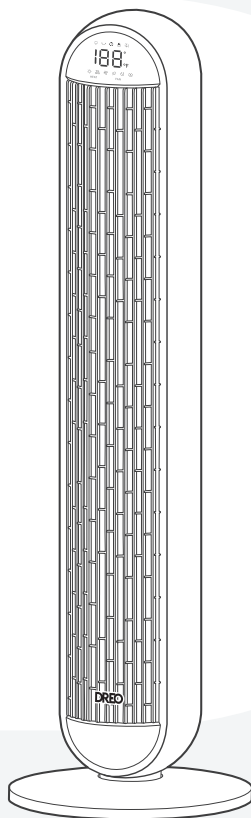

”

Thanks for Choosing **DREO!**

Your support means the world to us.
We hope you enjoy our product as much as
we did creating it.

Extend Your Warranty For Free

Scan or visit [**dreocom.com/warranty**](https://dreocom.com/warranty)

To extend your warranty for free by registering your product.
If you have any product issues, we always stand ready to help.



(888) 290-1688

(Mon - Fri, 9:00 am-5:00 pm PST/PDT)



support@dreocom.com



www.dreocom.com

CONTENTS

01

IMPORTANT SAFETY INSTRUCTIONS

1-4

02

ASSEMBLING YOUR APPLIANCE

5-7

03

KNOWING YOUR APPLIANCE

8

04

USING YOUR APPLIANCE

9-14

05

CLEANING AND MAINTENANCE

15-17

06

TROUBLESHOOTING

18-19

07

DREO CUSTOMER CARE

 
20-21

IMPORTANT SAFETY INSTRUCTIONS

01



When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons and hyperthermia, including the following:



Warning: In order to avoid overheating, do not cover the heater.

Do not use the fan heater near flammables and combustibles.

GENERAL SAFETY

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
3. Use the handle to move this heater.
4. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
6. The output of this heater may vary and its temperature may become hot enough to burn exposed skin. Use of this heater is not recommended for persons with a high sensitivity to heat or an inability to react to avoid burns.
7. Do not attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a repair technician may disassemble or repair this product.
8. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
9. If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact Customer Support.
10. There may be a trace of smoke or odor when the unit is first operated. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur.

LOCATION SAFETY

1. Do not use outdoors.
2. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
3. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
5. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.

ELECTRICITY SAFETY

1. Always unplug heater when not in use.
2. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
3. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
4. To disconnect heater, turn controls to off, then remove plug from outlet.
5. Always plug heaters directly into a wall outlet/receptacle.
6. Never use with an extension cord or relocatable power tap (outlet/power strip).
7. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
8. It is normal for the plug and cord to feel warm to the touch.
9. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging the heater into a worn outlet / receptacle may result in overheating of the power cord or fire.
10. This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized plug. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.
11. Hyperthermia can result in death. Symptoms of hyperthermia include

- high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
12. To avoid excessive room temperatures which can cause hyperthermia: **DO NOT** leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
 13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
 14. **CAUTION – High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9 m) from the front of the heater and away from the side and rear. WARNING – Risk of Hyperthermia.**

Safety Plug

This unit is equipped with DREO's **FortPlug™** restorable overheat protection to prevent fire accidents.

 


When the area around the power plug switch overheats, the protection will cut off the heating power to prevent overheating or fire.




When activated, the screen will show PP and the power indicator will start **flashing**.

Note: The machine will not be operational until power is restored to normal.

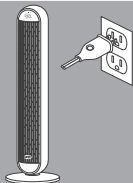

After the plug overheat protection takes effect, please unplug the heater and make sure that:

 - The current is greater than 15A.
 - The socket is not loose or has aged.
 - The outlet is not shared with other appliances.
 - The heater is not plugged through a extension cord.
 - The plug is not bent or damaged.
 - The power cord is not tied or pressed by other objects.
- Check your Quick Start Guide for detailed safety instructions.



After confirming that the above risks are not present, wait for the plug temperature to cool (at least 5 minutes), then plug it. If the overheat plug protection is repeatedly triggered, it is recommended to use another outlet, or contact DREO customer service.



Caution: To prevent electric shock, please match the wide blade of the plug with the wide slot insert.



WARNING - Risk of Heat Stroke (Hyperthermia)

Hyperthermia can result in death in infants or others
Use caution to avoid overheating individuals
Read and follow all instructions before use

FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

Gentle Reminder:




Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.

Specifications

Model No.	DR-HSH016
Rated Power	1500W
Input	120V~ 60Hz

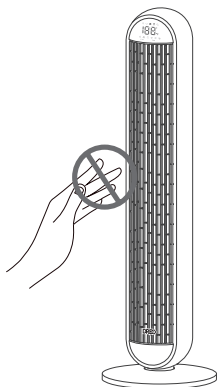 

HOT SURFACE

 
THE FRONT SURFACE CAN BE VERY
HOT DURING USE.
DO NOT TOUCH WHEN IN USE.

ASSEMBLING YOUR 2-IN-1 TOWER HEATER FAN


02

Assembly Instructions

When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

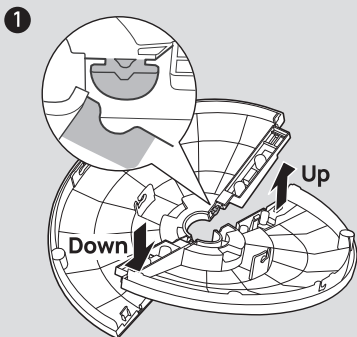


 Keep the base halves in a crossed position, then hook the arched cutout on one half onto the arched support on the other half.

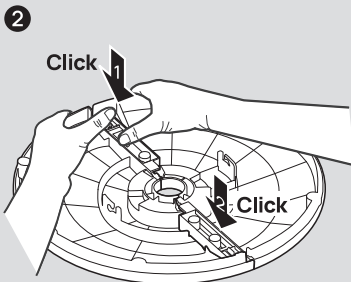


Press down on edges to **click** two base halves together.

 3

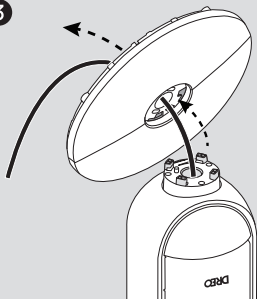


Run the cord through the center hole.

 4

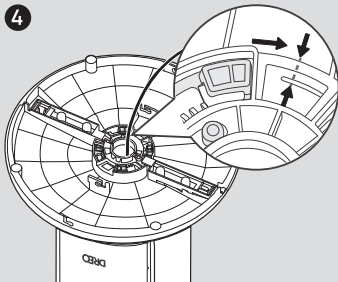

Fit the base onto the bottom of the heater fan by aligning the arrows on the underside.

 
5

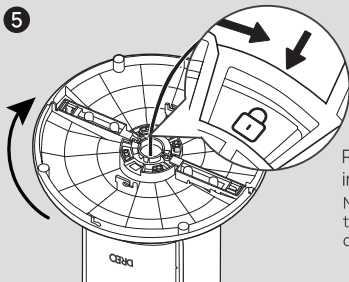

Rotate the base clockwise to lock in place.

Note: It is normal for the base to rotate together with the fan motor casing, in this case, keep rotating until the base is locked.

 6

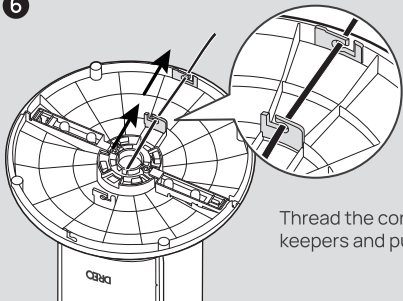

Thread the cord through all REAR cord keepers and put the heater fan upright.

⚠ CAUTION

 
- Do not operate the appliance if the base has not been installed.
- Make sure to thread the cord through all rear cord keepers.



KNOWING YOUR APPLIANCE

03

Package Contents

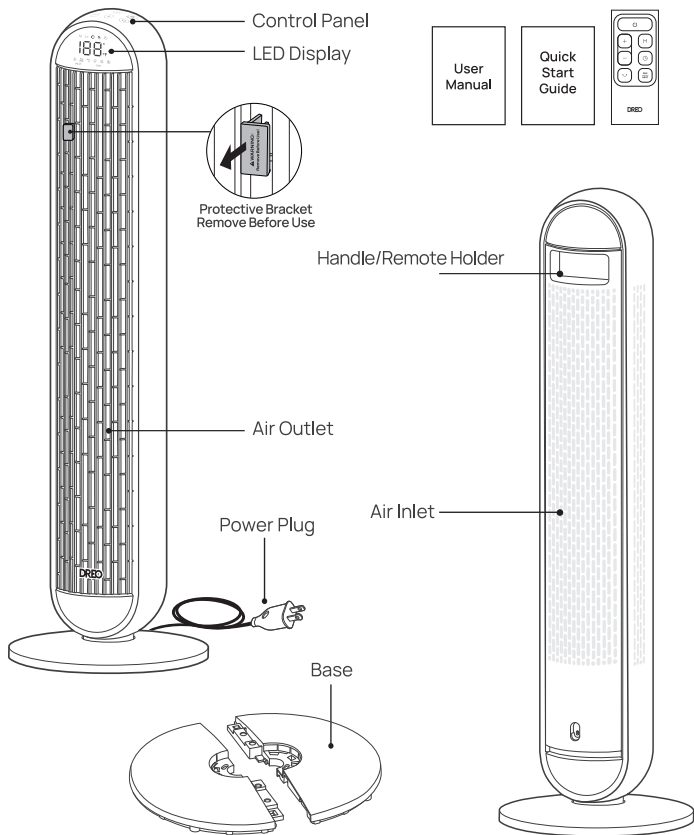

USING YOUR HEATER

04

Control Panel



Power On/ Off

Touch to turn the appliance on or off.

Note:

When the heater fan is plugged into the electric outlet, the power indicator  will light in red.

Once turned off, a 15-second countdown will show up on the display as the fan will continue to run for 15 seconds to blow out the remaining heat.



FAN / HEAT Switch

Long press for 3s to switch between FAN and HEAT functions.

Note:

When switching to the FAN function, the appliance will show a 15-second countdown on the display as the fan will continue to blow out the remaining heat.



Mode Settings

HEAT Function

Touch to switch between  → ECO.

FAN Function

Touch to switch between Normal / Natural / Sleep / Auto.



Touch  to turn on/off oscillation

- The oscillation angle is set to 90° by default.
- After activating oscillation, touch  to switch between 120° / 90° / 60° / 30°.



Timer

- When the heater fan is on/off, touch to set a timer (0-12H).
- After the timer ends, the heater fan will turn off/on automatically.
- To cancel, set the timer to 0 hour.



Setting Adjustment Buttons

- In Power Heat Mode, adjust heating level (H1/H2/H3/H4/H5).
- In ECO Mode, adjust set temperature (41-95°F).
- In Fan Mode, adjust fan speed (1-12 levels).
- In Oscillation Mode, adjust the oscillation angle (0°/30°/60°/90°/120°).
- In Timer Mode, adjust the timer duration (0-12H).

Note:

In ECO mode, the heater fan will turn off automatically when the set temperature has been reached.

If your heater fan turns off frequently, please raise the set temperature, or switch to Power Heat mode.



Child Lock

 
Long press  and  for 3s to activate / deactivate the Child Lock function, when activated, the  on the display will light up, and all the buttons on the space heater will be locked.



Mute/Unmute

Touch to turn on/off the button sounds.

LED Display

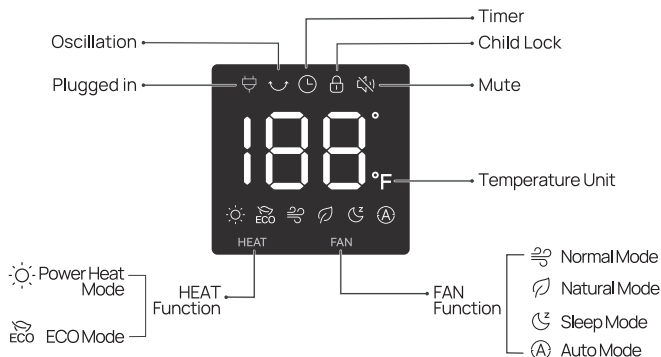

Working Modes

FAN Function:



Normal Mode
Runs at a fixed speed.



Auto Mode
Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.



Natural Mode
Fan speed goes up and down intermittently to replicate the natural breeze.



Sleep Mode (Mute auto on)
Balance comfort and noise by automatically decreasing fan speed as you fall sleep.
If the fan speed is higher than 3, it will decrease two times, one speed every 30 minutes, then it will remain constant.
If the fan speed is 3 or below it will remain constant.

HEAT Function:



Power Heat
Rapid heating with five different levels

 


ECO Mode
The heater fan will automatically select its optimal heating power ranging from 700W to 1500W, depending on the difference between the set temperature (41-95 °F) and ambient temperature.

More Features

This appliance features auto-brightness.

The display adapts automatically based on the ambient lighting conditions.

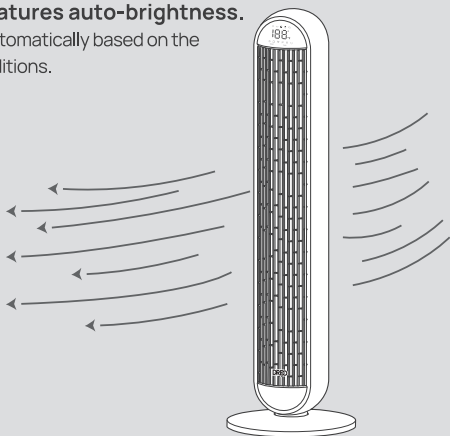

Memory Function

The heater fan will remember its last settings (temperatures, working modes, oscillation status) once turned on again.

24-Hour Auto Off

This feature is not ON by default.

When this feature is ON, the heater fan will shut off automatically after continuously running for 24 hours.

When the heater fan is on STANDBY, long press  for 3 seconds to turn this feature ON/OFF. The display will show "ON" and "OFF" respectively.

 
Tip-Over Protection

When the heater fan is tipped over, it will shut off automatically with the error code "P4" on the display.


Overheat Protection

When the heater fan overheats, it will shut off automatically with the error code "FF" on the display.

Remote Control

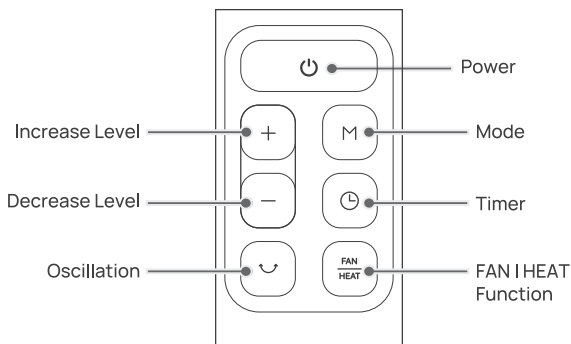

Battery Replacement

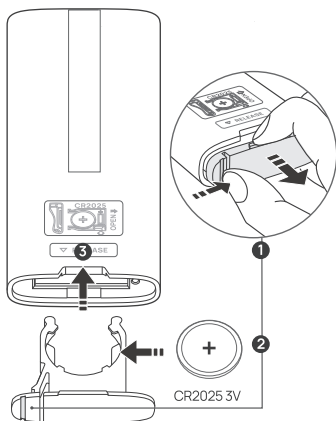 

- 1 Keep the locking tab pressed while pulling out the battery holder from the slot at the back.
- 2 Replace with the same battery type with the (+) side facing up.
- 3 Push in the holder until securely locked in place.

Note: If the appliance doesn't respond when using the remote control in close range please consider replacing the battery.



WARNING

 
- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Compatible battery type: CR2025.
- e) Battery nominal voltage: 3.0 Vdc
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (rated temperature: 140 °F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
- i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

CLEANING AND MAINTENANCE

05

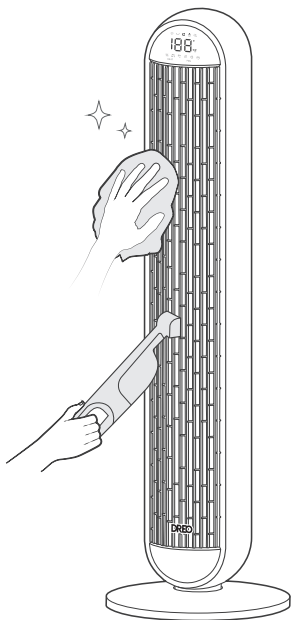

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Grilles & Blades

Remove the dust using a vacuum or air duster.

Base

The base can be disassembled in the reverse order of assembly.

CAUTION



1. Always unplug the appliance before any cleaning or maintenance.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the appliance.
4. Store in a cool, dry place and cover it to protect from dust.

 
Rear Grille



WARNING


Turn off the appliance and unplug before any cleaning and maintenance.

1

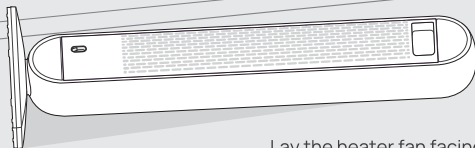


Lay the heater fan facing down on a flat surface.

 2

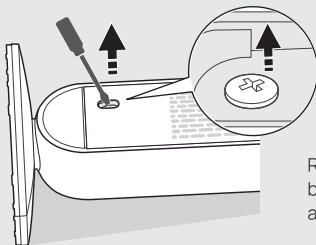


Remove the screw at the bottom of the rear grille with a Philips screwdriver.

 3

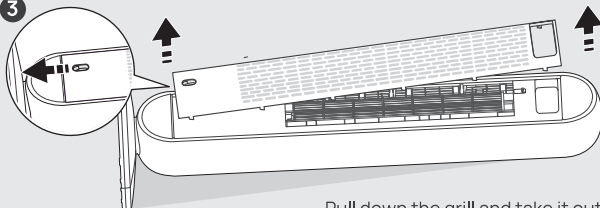


Pull down the grill and take it out.

 4

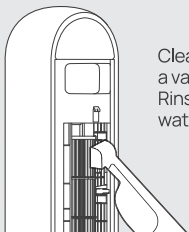

 Clean the dust on blades using a vacuum cleaner or air duster. Rinse the rear grille under running water with a clean, damp cloth.



5

Dry up, then install the grille and the screw back by following the reverse order of disassembly.



 
ATTENTION



DO NOT unscrew the unit.



DO NOT use cleaning agents.



DO NOT use abrasive scrubbers.



Fire or electrical shock hazard.
DO NOT immerse the main unit in water.
NEVER allow water to get inside the heater.



Except for cleaning, any servicing should be performed by an authorized service representative.



Store in a cool, dry area and keep the cable out of high-traffic areas to avoid tripping hazards.

TROUBLESHOOTING

06

Problem	Possible Causes	Solution
Malfunction codes on LED display	E2 - Temperature sensor short circuit	Unplug it from the power source and contact Customer Support.
	E1 - Temperature sensor open circuit	Unplug it from the power source and contact Customer Support.
	FF - Overheat Protection	Unplug and wait for it to cool down before plugging in again.
	P4 - Tip-Over Protection	Place the heater back on a flat, level and stable surface.
Heater fan does not start	Power cord is not properly plugged in.	Connect the plug to a powered electrical outlet.
	Overheat protection has been activated.	Unplug and allow it to cool.
		Remove any objects on or near the heater.

Heater fan does not start	No power is passing through the unit.	Ensure that your circuit breaker or fuse is working properly.
		Ensure that your heater fan is placed on a flat and even surface.
	The set temperature is lower than the ambient temperature.	Ensure that the temperature is set to be higher than the ambient temperature.
The heater fan suddenly stops during heating.	The temperature exceeds the threshold of the thermal cutoff.	Turn off and unplug the unit. Allow it to cool and plug into the electrical outlet again.
	The heater fan is tipped over.	Place it on a flat, level and stable surface.
	In ECO mode, the heater fan will turn off automatically when the set temperature has been reached.	This is normal. If your heater fan turns off frequently, please raise the set temperature, or switch to Power Heat mode.

If your problem is not listed or still persists, contact our Customer Support (see page 21).

Default 12-Month Warranty

This appliance is covered by DREO warranty for 12 months from the date of its original purchase.

Extend Your Warranty

Extend your warranty by registering your new appliance on our website

<https://dreoweb.com/warranty>

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by DREO.

We can only provide after-sales service for products that are sold by DREO or DREO authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Model No.: DR-HSH016
Rev_1.3_EN

We're Here to Help!

 (888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)

 support@dreco.com

 www.dreco.com

 Shenzhen Hesung Innovation Technology Co., LTD
 26F, Bldg A7, Creative City, Shenzhen, China



MADE IN CHINA



www.dreo.com

Looking for help?

Contact us to get expert support.



support@dreo.com



[\(888\) 290-1688](tel:(888)290-1688)



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT