 


DREO | Oil-filled Heater

153

USER MANUAL

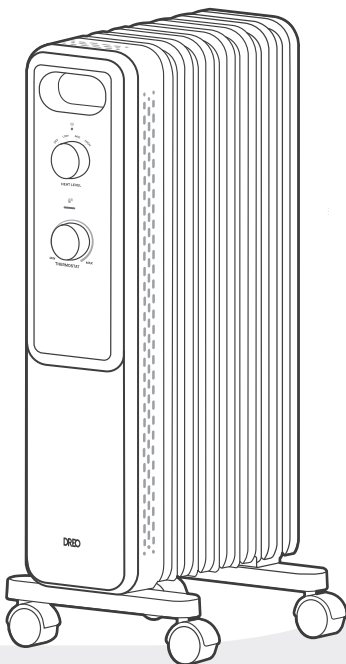

”

Thanks for Choosing **DREO!**

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

CONTENTS

01

IMPORTANT SAFETY INSTRUCTIONS

1-4

02

ASSEMBLING YOUR APPLIANCE

5-6

03

KNOWING YOUR APPLIANCE

7

04

USING YOUR APPLIANCE

8-9

05

CLEANING AND MAINTENANCE

10

06

TROUBLESHOOTING

11

07

DREO CUSTOMER CARE

 
12-14

IMPORTANT SAFETY INSTRUCTIONS

01



When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons and hyperthermia, including the following:

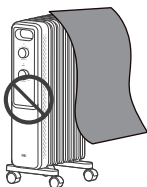

Do not cover the heater while in operation.

Do not use the Oil-filled heater near flammables and combustibles.

GENERAL SAFETY

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
3. Use the handle to move this heater.
4. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
6. The output of this heater may vary and its temperature may become hot enough to burn exposed skin. Use of this heater is not recommended for persons with a high sensitivity to heat or an inability to react to avoid burns.
7. Do not attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a repair technician may disassemble or repair this product.
8. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
9. If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into

water, do not use and contact Customer Support.

10. There may be a trace of smoke or odor when the unit is first operated. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur.

LOCATION SAFETY

1. Do not use outdoors.
2. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
3. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
5. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.

ELECTRICITY SAFETY

1. Always unplug heater when not in use.
2. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
3. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
4. To disconnect heater, turn controls to off, then remove plug from outlet.
5. Always plug heaters directly into a wall outlet/receptacle.
6. Never use with an extension cord or relocatable power tap (outlet/power strip).
7. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.

8. It is normal for the plug and cord to feel warm to the touch.
9. A plug or cord which becomes hot to the touch or becomes distorted in shape may be result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging the heater into a worn outlet / receptacle may result in overheating of the power cord of fire.
10. This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized plug. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.
11. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
12. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14. **CAUTION - High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9m) from the front of the heater and away from the side and rear. WARNING - Risk of Hyperthermia.**



WARNING - Risk of Heat Stroke (Hyperthermia)

Hyperthermia can result in death in infants or others.
Use caution to avoid overheating individuals.
Read and follow all instructions before use.

FOR HOUSEHOLD USE ONLY

READ AND SAVE THESE INSTRUCTIONS

Gentle Reminder:




Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.

Specifications

Model	DR-HSH033
Rated Power	1500W
Input	120V~ 60Hz

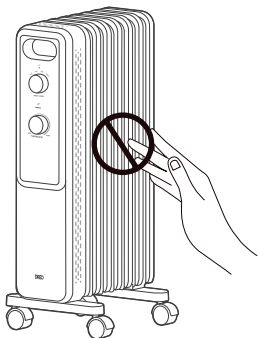 




HOT SURFACE

THE HEATER CAN BE VERY HOT ON THE SIDES AND REAR.
ONLY THE FRONT PANEL AND HANDLE ARE SAFE TO TOUCH DURING USE.

ASSEMBLING YOUR APPLIANCE

02

   Package Contents

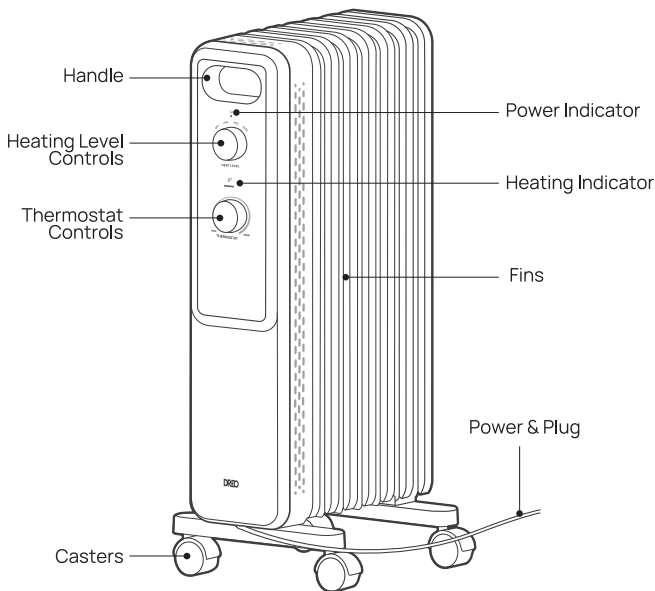


4 x Caster Screws




2 x Caster Wheels

Assembly Instructions

 
When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

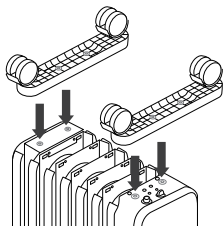

 1. Place the heater upside down and align the casters with the holes on the base.

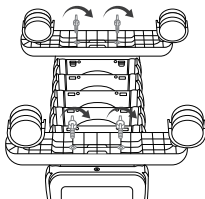

 2. Screw through the holes in the casters, make sure the base and the casters are firmly fixed.

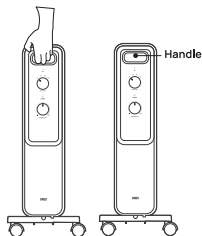

3. Set the heater upright. Use the front handle to move to the desired location.

WARNING



Tip-over hazard.

Do not operate without the casters properly installed.



Fire hazard.

Operate the heater in the upright position only. Any other position can cause damage to this heater and even a fire hazard.



 
Burn hazard.

Unplug and allow the heater to cool before using the handle to move the heater.


KNOWING YOUR APPLIANCE

03


Getting the Most Out of Your Heater

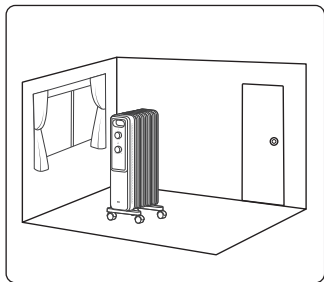

 1. Put the heater by the window to block the penetration of cold air from outside.

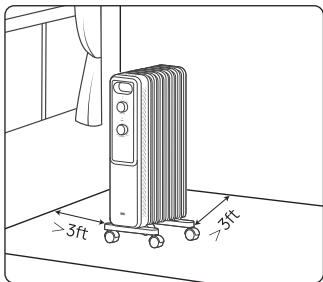


 2. Keep curtains and other furniture at least 3 ft/ 1m away from the heater.

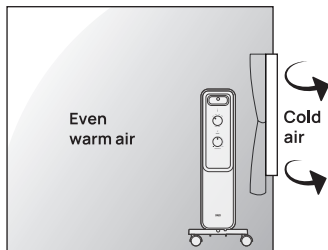

What to Do

 Put it by the window to get even warm air.

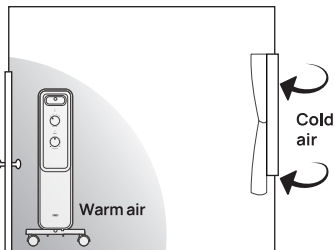

What Not to Do

If you put it near the door, cold air invades and warm air escapes easily.

USING YOUR APPLIANCE

 
04

Before First Use

The first time this appliance is used, run it at maximum power for at least two hours. During this time, ventilate the room thoroughly to eliminate the "new" smell released by the appliance. It is completely normal for the appliance to emit "creaking" sounds on the first run.

How to Use

1 Plug In

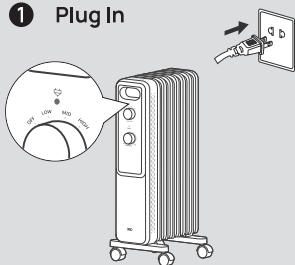


 will light up when the appliance is plugged in.

2 Select Heating Level




Use the heating level knob to select the desired heating power.

 3 Start Heating

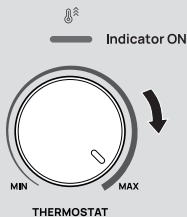


Turn the thermostat knob clockwise all the way to maximum. The appliance will then start heating.

 4 Set Temperature

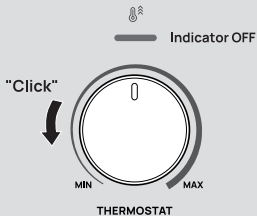

When your desired temperature is reached, turn the thermostat knob counter-clockwise until you hear a "click", and  will turn off.

 5 Maintain Temperature

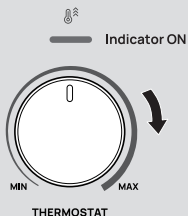

Turn the thermostat knob clockwise until  lights up. The appliance will then keep running constantly at this temperature setting.

Heating Indicator



Your new Oil-filled Heater comes with an additional Heating Indicator.

- When heating up, this indicator will light up.
- When you have turned the thermostat control counter-clockwise until a "click" is heard to maintain the current temperature, this indicator will turn off.

More Features

 


Tip-over & Overheat Protection


When the heater is tipped over or overheats, it will shut off automatically, and the power indicator  will turn off.

CLEANING AND MAINTENANCE

05



 Always turn off and unplug before cleaning.



Outer Surface

Use a soft, dry cloth to gently wipe clean the outer surface.



ATTENTION



DO NOT unscrew the unit.



DO NOT use cleaning agents.



DO NOT use abrasive scrubbers.



Fire or electrical shock hazard.
DO NOT immerse the main unit in water.
NEVER allow water to get inside the heater.



Except for cleaning, any servicing should be performed by an authorized service representative.



Store in a cool, dry area and keep the cable out of high-traffic areas to avoid tripping hazards.

Problem	Possible Causes	Solution
Heater does not start / The heater suddenly stops during heating	The heater was tipped over.	Place it on a flat, level and stable surface, then wait for the  indicator to light up.
	Overheat protection has been activated.	Unplug and wait for it to cool down before plugging in again.
	No power is passing through the unit.	Remove any objects on or near the heater.
		Ensure that your circuit breaker or fuse is working properly.
	The ambient temperature is not rising.	Ensure that your heater is placed on a flat and even surface.
The temperature is not going up	The heater is being used in open areas or outdoors.	Ensure that the temperature is set to be higher than the ambient temperature.
		This heater uses convection, which may take longer, but allows it to deliver heat uniformly without making air too dry.
	The room temperature does not meet expectations.	This heater works best in closed areas or indoor use. If you feel less heating than expected in this scenario, you can: - Try to move the heater closer to you - Increase the target temperature - Switch to Power Heat Mode

If your problem is not listed or still persists, please contact our Customer Support (see page 14)

DREO CUSTOMER CARE

07

12-MONTH LIMITED WARRANTY

What is Covered

DREO warrants to you that your product will be free from original defects in materials and workmanship for a period of twelve (12) months from the date of your purchase, when you use your product for intended purposes in accordance with this User Manual.

Please retain your proof of purchase. If you do not retain your proof of purchase, your warranty will start two (2) months from the date of manufacture printed on your product label.

What is Not Covered

This limited warranty only applies to the original purchaser of your product and is non-transferable. This warranty is only valid if your product is used in the country in which you originally purchased it. In addition, this warranty will not apply, and DREO will not be liable for any costs, damages, or repairs, in connection with any of the following:

- Accidents or use of your product with inappropriate force;
- Damage or destruction caused by wrong voltage or unstable electric current;
- Normal wear and tear;
- Careless operation or handling, misuse, abuse, neglect, and/or failure to maintain or use your product in accordance with this User Manual;
- Any partially or completely altered, modified and/or dismantled products;
- Reduction in battery discharge time due to battery age or use (as applicable);
- Products with altered or removed serial numbers;
- Clearing any blockages from the product;
- Purchases from retailers and distributors not authorized by DREO to sell this product;
- Defects caused by or resulting from damages from shipping or handling by any third party not authorized by DREO to ship or handle your product; or
- Defects caused by or resulting from repairs, service, improper maintenance, or alteration to your product or any of its components by anyone other than a repair person authorized by DREO.

Any service and customer support that DREO provides to you under this limited warranty will not extend the duration of this limited warranty.

Warranty Limitations and Exclusions

ANY IMPLIED WARRANTIES RELATING TO YOUR PRODUCT, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE AND ARE OTHERWISE DISCLAIMED.

THIS LIMITED WARRANTY SHALL BE THE SOLE REMEDY OF THE PURCHASER OR USER OF THE PRODUCT, AND DREO SHALL NOT BE LIABLE FOR AN ALLEGEDLY DEFECTIVE OR DAMAGED PRODUCT EXCEPT TO REPAIR OR REPLACE IT IN ACCORDANCE WITH THIS LIMITED WARRANTY. DREO WILL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, INDIRECT, CONTINGENT, OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY NATURE THAT YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF YOUR PRODUCT.

Some jurisdictions do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

Limited Remedies

If your product fails because of an original defect in material and/or workmanship during the warranty period, DREO will repair or replace (in DREO's sole discretion) your product.

To obtain warranty service on your product, contact us at support@dreo.com or at (888) 290-1688 (available from Monday-Friday, 9:00 AM-5:00 PM PST/PDT) for further instructions.

IN THE EVENT OF AN ORIGINAL DEFECT IN MATERIAL AND/OR WORKMANSHIP, TO THE EXTENT PERMITTED BY LAW, THE REMEDIES SET FORTH IMMEDIATELY ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES.

Model No.: DR-HSH033
Rev_1.0_EN

We're Here to Help!

 **(888) 290-1688** Mon - Fri, 9:00 am-5:00 pm PST/PDT

 **support@dreco.com**

 **www.dreco.com**



www.dreo.com

Looking for help?

Contact us to get expert support.



support@dreo.com



[\(888\) 290-1688](tel:(888)290-1688)



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT