


DREO

Whole-Room Heater 725

USER MANUAL

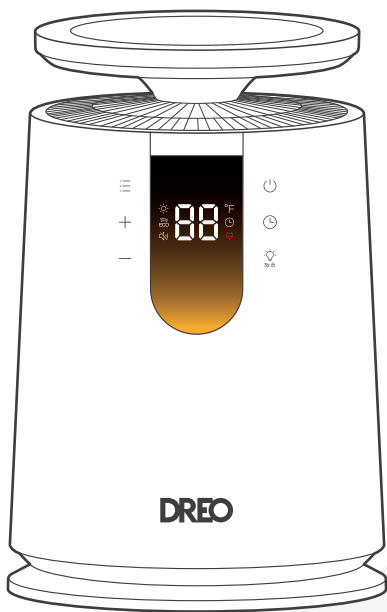

”

Thanks for Choosing **DREO!**

Your support means the world to us.
We hope you enjoy our product as much as
we did creating it.

CONTENTS

01

KNOWING YOUR
APPLIANCE

1

02

USING YOUR
APPLIANCE

2-4

03

CLEANING AND
MAINTENANCE

5-6

04


TROUBLESHOOTING

7-8

KNOWING YOUR APPLIANCE

01

Package Contents

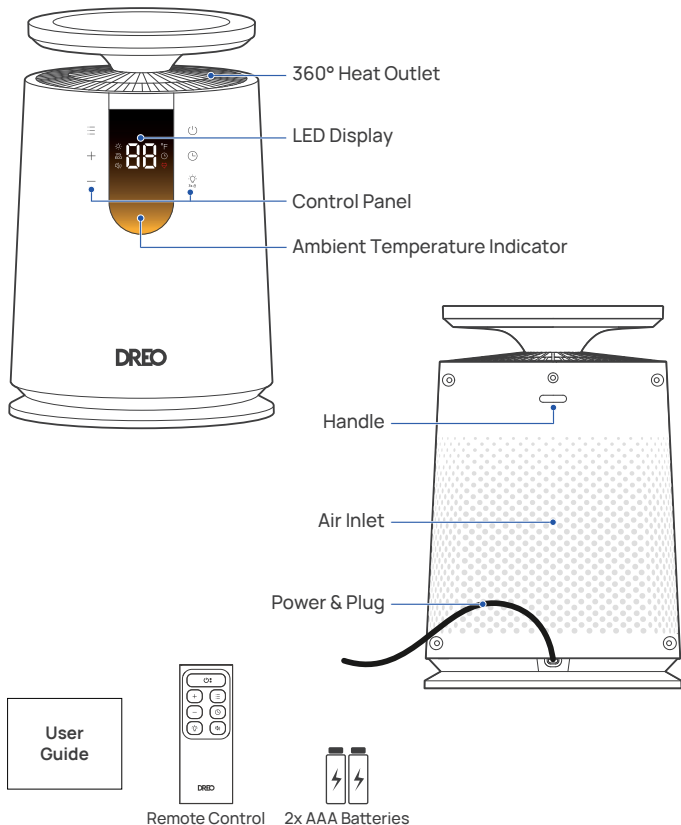

USING YOUR APPLIANCE

02



Placement: Make sure the heater is on a firm, level, open surface free from obstructions and at least 3 feet (0.9m) away from any wall or any combustible material during use. DO NOT use on an unstable surface such as bedding or deep carpeting.

Control Panel



Power

- Touch to turn the heater on or off.

Note: When the heater is plugged into the electric outlet,  will light up and  appears on the display.

Once turned off, a 30-second countdown will show up on the display as the fan will continue to run for 30 seconds to blow out the remaining heat.



Mode

Touch to switch between  → ECO.



Power heat with three heating levels:
H1 (900W), H2 (1300W), H3 (1500W).

ECO

The heater will automatically select its optimal heating power, depending on the difference between the set temperature (41-95°F) and ambient temperature.

Note:

- When the ambient temperature reaches the set temperature, the heater will turn off automatically in 30 seconds.
- When the ambient temperature drops below the set temperature, the heater will operate on low or high power (900W or 1500W), depending on the difference between the two temperatures.
- In ECO mode, the heater will turn off automatically when the set temperature has been reached. If your heater turns off frequently, please raise the set temperature, or switch to Power Heat mode.

Mute/Unmute

To turn on/off the button sounds, long press the Mode button  on the panel for 3 seconds.



Timer

- When the heater is on, touch to set a timer (0-12h).

After the timer ends, the heater will turn off automatically.

- To cancel, set the timer to 0 hour.




Settings Adjustment

- In Power Heat Mode, touch $+$ or $-$ to adjust the heating level.
- In ECO mode, touch $+$ or $-$ to adjust the set temperature.
- When setting a timer, touch $+$ or $-$ to adjust the duration of timer.

Ambient Temperature Indicator

- Touch to turn the ambient temperature indicator and LED display on/off.
- Long press for 3 seconds to activate/deactivate the Child Lock function. When activated, the display will show LCK , and all the buttons on the heater will be locked.

LED Display

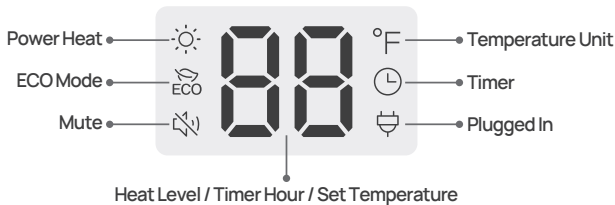

More Features

Ambient Temperature Indicator

Besides the LED display, your new heater comes with an additional LED indicator that lets you see the ambient temperature condition even from far away.



Cold



Comfort



Warm



Hot



Memory

If the appliance is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.



Tip-over Protection

When the heater is tipped over, it will shut off automatically with the error code "P4" on the display.



24-Hour Auto Off

This feature is not ON by default.

When this feature is ON, the heater will shut off automatically after continuously running for 24 hours.

Long press the Timer button for 3 seconds to turn this feature ON/OFF when this heater is on standby. The display will show "01" and "0F" respectively.



Overheat Protection


When the heater overheats, it will shut off automatically with the error code "FF" on the display.



LED Display On/Off


Turn on/off the LED Display by using the remote control.

Remote Control

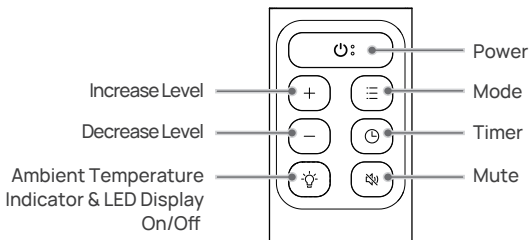


CLEANING AND MAINTENANCE

03

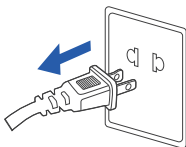


Always turn off and unplug before cleaning.

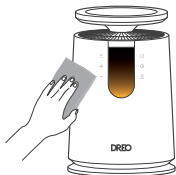

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

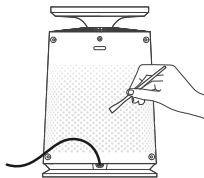

Air Inlet

Use a soft, dry cloth or a cotton-tipped swab to remove any dust from the air inlet.



ATTENTION



DO NOT unscrew
the unit.



DO NOT use
cleaning agents.



DO NOT use
abrasive scrubbers.



Fire or electrical shock hazard.
DO NOT immerse the main unit in water.
NEVER allow water to get inside the heater.



Except for cleaning, any servicing should be
performed by an authorized service representative.



Store in a cool, dry area and keep the cable out
of high-traffic areas to avoid tripping hazards.

TROUBLESHOOTING

04

Problem	Possible Causes	Solution
Malfunction codes on LED display.	E2 - Temperature sensor short circuit	Unplug it from the power source and contact Customer Support.
	E1 - Temperature sensor open circuit	Unplug it from the power source and contact Customer Support.
	FF - Overheat Protection	Unplug and wait for it to cool down before plugging in again.
	P4 - Tip-Over Protection	Place the heater back on a flat, level and stable surface.
Heater does not start.	Power cord is not properly plugged in.	Connect the plug to a powered electrical outlet.
	Overheat protection has been activated.	Unplug and wait for it to cool down before plugging in again.
		Remove any objects on or near the heater.

Heater does not start.	No power is passing through the unit.	Ensure that your circuit breaker or fuse is working properly.
		Ensure that your heater is placed on a flat and even surface.
	The set temperature is lower than the ambient temperature.	Ensure that the temperature is set to be higher than the ambient temperature.
The heater suddenly stops during heating.	The temperature exceeds the threshold of the thermal cut off.	Turn off and unplug the unit. Allow it to cool and plug into the electrical outlet again.
	The heater is tipped over.	Place it on a flat, level and stable surface.
	In ECO mode, the heater will turn off automatically when the set temperature has been reached.	This is normal. If your heater turns off frequently, please raise the set temperature, or switch to Power Heat mode.

If your problem is not listed or still persists, contact our Customer Support.

Model No.: DR-HSH035
Rev_EN_RTL_1.1

Reach out to us, it's easy!

 **(888) 290-1688** (Mon - Fri, 9:00 am-5:00 pm PST/PDT)

 **support@dreo.com**

 **www.dreo.com**

www.dreo.com

Reach out to us, it's easy!

Contact us to get expert support.



support@dreo.com



[\(888\) 290-1688](tel:(888)290-1688)



www.dreo.com

Mon - Fri, 9:00 am - 5:00 pm PST/PDT