

DREO

Tower Fan

USER MANUAL

www.dreo.com

DR-HTF004S

Looking for help?

Contact us to get expert support.



support@dreo.com

 


[\(888\) 520-3736](tel:(888)520-3736)



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT

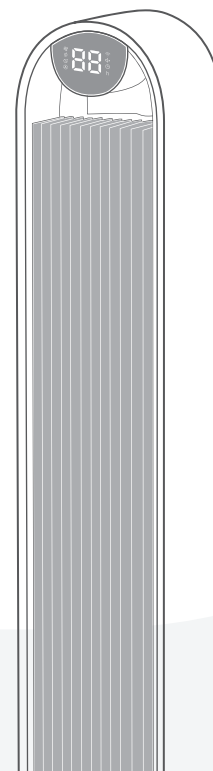

”

Thanks For Choosing DREO!

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

EXTEND YOUR WARRANTY FOR FREE

Visit dreocom/warranty to extend your warranty for free by registering your product. If you have any product issues, we always stand ready to help.

 support@dreocom  (888) 520-3736  www.dreocom

Mon - Fri, 9:00 am-5:00 pm PST/PDT

FOLLOW US TO DISCOVER MORE

Find us on social media to stay connected and find new inspiration.

Join the Dreco community on Facebook:

facebook.com/groups/dreohome 



CONTENTS

1	IMPORTANT SAFETY INSTRUCTIONS	1-2

2	ASSEMBLING YOUR TOWER FAN	3-5

3	CONNECTING TO YOUR TOWER FAN	6

4	KNOWING YOUR TOWER FAN	7-8

5	USING YOUR TOWER FAN	9-11

6	CLEANING AND MAINTENANCE	12

7	TROUBLESHOOTING	13


8	DREO CUSTOMER CARE	14

9	FCC STATEMENT	15

IMPORTANT SAFETY INSTRUCTIONS



 READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.



Do not cover the air inlet and outlet while in operation.



Do not use the fan near flammables and combustibles.

General Safety

- Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
- Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
- This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

Operation Safety

- Place the appliance on a flat, dry surface before use.
- Do not** immerse in water and any other liquids.
- Do not** use the appliance until the base is installed.
- Do not** insert your fingers, pencil and any other objects into the grilles while in operation.
- Do not** dismantle, repair, or modify. All servicing should be performed by qualified personnel.

Electricity Safety

- Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
- Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- WARNING:** To reduce the risk of fire or electric shock, do not use this tower fan with any solid-state speed control device.
- 24V/1.5A power adapter only. Turn off the appliance before unplugging.

FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.

Specifications







Model	DR-HTF004S
Power Supply	24V $\equiv$ 1.5A
Rated Power	36W
Power Adapter	Input: 120V ~ 60Hz 1.0A Output: 24V $\equiv$ 1.5A
Battery Type	CR2025 3V

ASSEMBLING YOUR TOWER FAN



2

Assembly Instructions

      When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

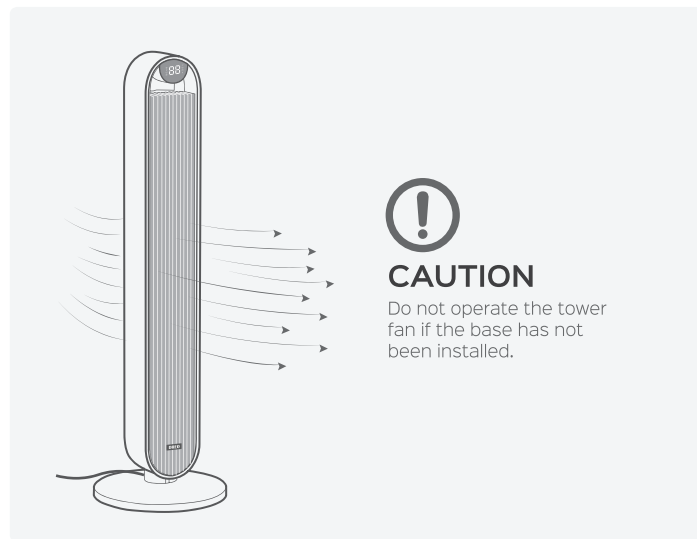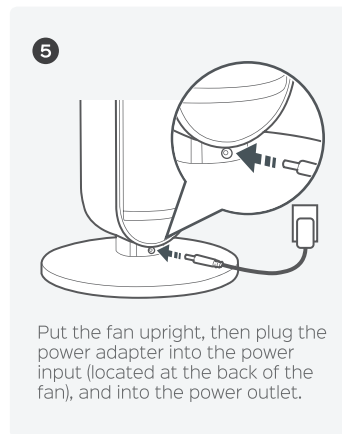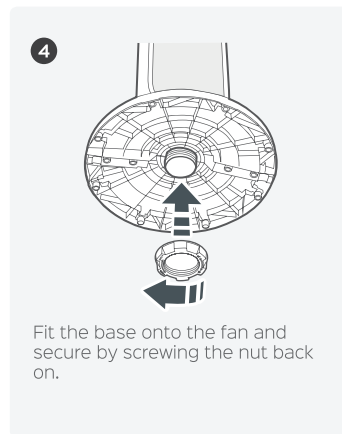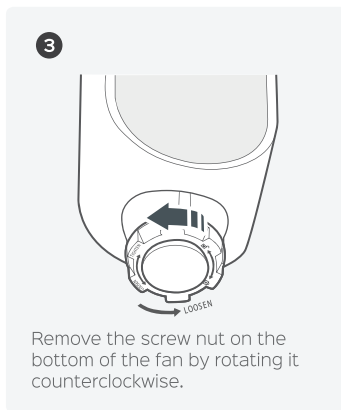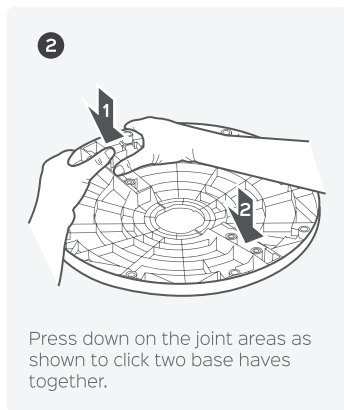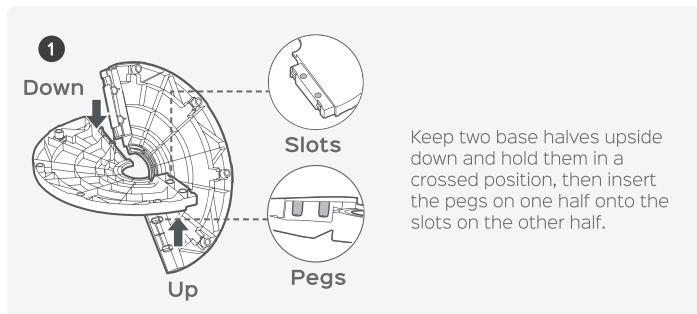

Package Contents

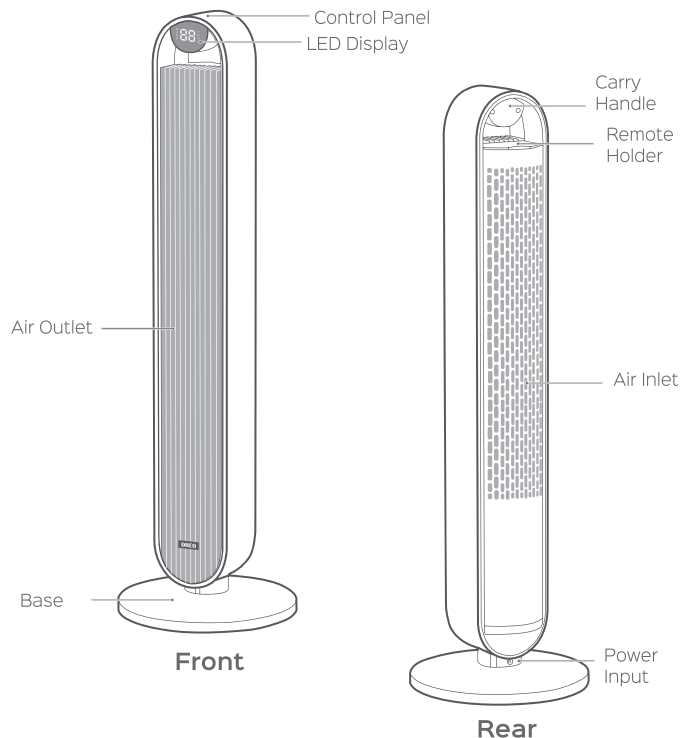  

User
Manual



Quick Start
Guide



Remote Control
(Battery Included)



Power Adapter

CONNECTING TO YOUR TOWER FAN

3



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search for "Dreo", then select and download the app.



You can use the Dreo app to connect your smart tower fan to **Amazon Alexa** or **Google Assistant**. Please follow the in-app instructions to set up your voice assistant.

NOTE: You must create a Dreo account to access voice assistants.

- 1 Launch Dreo and sign in or create account by following in-app instructions.
- 2 Once you're logged in, tap Add Device on the app.
(TIP: Make sure to enable Bluetooth on your mobile device and plug in the Dreo appliance.)
- 3 Select the Dreo appliance you want to link.
- 4 Hold the Oscillation button (☺) on the appliance for 5 seconds to start network settings and device pairing.
(TIP: The icon 📶 will keep flashing when pairing.)
- 5 Select your WiFi, enter password and tap Next to connect to the network. (TIP: The icon 📶 will keep flashing when pairing.)
- 6 You're now ready to control the appliance on your app. Let's start by giving your appliance a new name!
(TIP: To restart network setup, hold the Oscillation button (☺) again for 5 seconds. Unplugging the product disconnects the remote functions.)

KNOWING YOUR TOWER FAN



Control Panel



Power Button

- Turn power on/off
- Long press 10 seconds to reset to factory settings



Mode Button

- Switch between Normal/Natural/Sleep/Auto Mode
- Long press to mute/unmute



Oscillation Button

- Select to start/pause oscillating
- Long press 5 seconds to start network settings and device pairing



Decrease Button

- Decrease fan speed (1-12 levels)



Increase Button

- Increase fan speed (1-12 levels)



Timer Button

Select to set a timer (0-12h)

LED Display



Normal Mode



Natural Mode



Sleep Mode



Auto Mode



WiFi
Connection



Mute



Timer

 


Fan Speed /
Timer Hour



NOTE:

This tower fan features auto-brightness. The display adapts automatically based on the ambient lighting conditions.

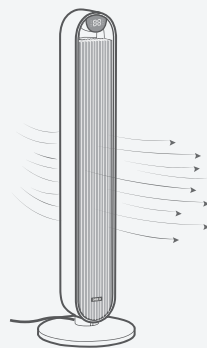


Getting the Most out of Your Tower Fan

1. It's not an air conditioner.
2. Remove any tall obstacles that might block the airflow from the fan.
3. Combine with your AC unit to get cooler air throughout the room.
4. Position the tower fan closer to you to get more direct airflow.
5. Place a bucket of ice in front of the fan for an extra cooling boost.

USING YOUR TOWER FAN

General Operations

 5

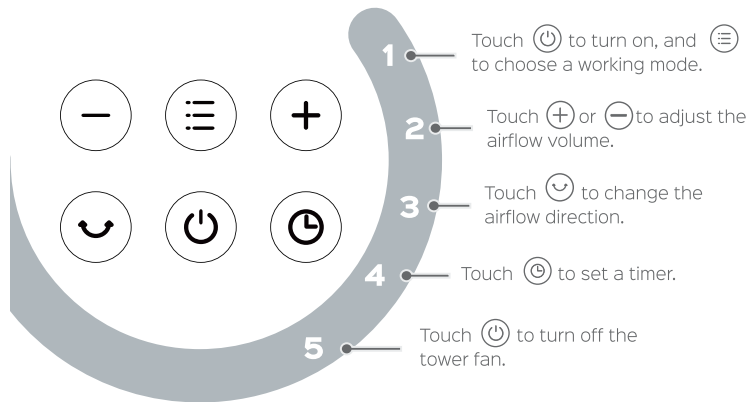

Working Modes



Sleep Mode (Mute Auto On)

Fan speed decreases every 30 minutes.

Speed decreases by three or two levels at most and will remain

constant if at level 3, 2 or 1:

For level 12: 12 → 11 → 10 → 9

For level 11: 11 → 10 → 9 → 8

For level 10: 10 → 9 → 8 → 7

For level 9: 9 → 8 → 7 → 6

For level 8: 8 → 7 → 6

For level 7: 7 → 6 → 5

For level 6: 6 → 5 → 4

For level 5: 5 → 4 → 3

For level 4: 4 → 3

For level 3: 3

For level 2: 2

For level 1: 1



Auto Mode

Fan speed adapts to the ambient temperature.



Normal Mode

Fan runs at the constant speed.



Natural Mode

Fan runs at alternating speeds.

Additional Features



Change Oscillation Angle

- The oscillation angle can be set to 30/60/90/120 degrees.
- To use this feature, please go to the Dreo app.



Timer

When the fan is ON/OFF, touch the timer button repeatedly to set a timer from 1 to 12 hours. When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: When the auto off timer is enabled, display will return to fan speed after 3 seconds.



Mute

Method 1: Short press the mute button on the remote control to turn on/off button sounds.


Method 2: Long press the mode button on the control panel to turn on/off button sounds.




Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the timer setting) when it is turned ON again.

 Remote Control

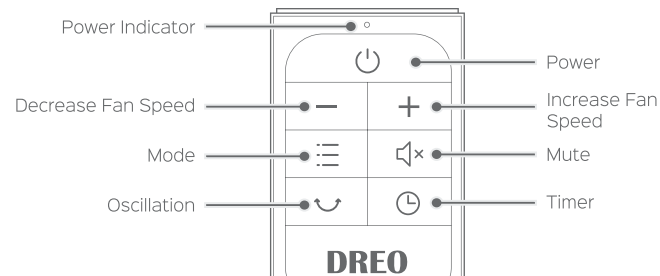

Battery Replacement

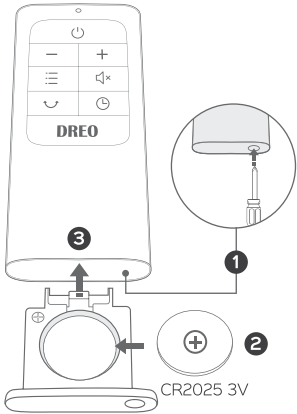 

- 1 Press the locking button to pop out the battery holder.
- 2 Replace with the same battery type with the (+) side facing up.
- 3 Push in the holder until securely locked into place.

Note: If the indicator on the remote control doesn't turn on any more, please consider replacing the battery.

 


WARNING
Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The batteries must be disposed of properly, including keeping them away from children. Even used cells may cause injury.

CLEANING AND MAINTENANCE

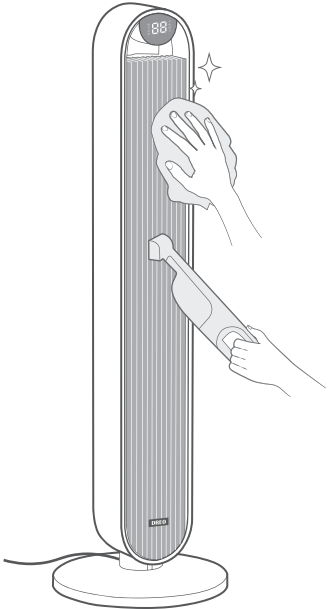

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Grilles & Blades

Remove the dust using a vacuum or air duster.

Base

The base can be disassembled in the reverse order of assembly.



CAUTION

1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.

TROUBLESHOOTING



My fan won't turn on!

1. Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the fan.
2. Check if the power adapter is securely inserted into the power outlet and the tower fan.

My fan is shaky and wobbling!

1. Place the fan on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in **page 3-4**.

My fan is making vibration and noise!

1. Place the fan on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support (**see page 14**).

DREO CUSTOMER CARE



Default 12-Month Warranty

This appliance is covered by Dreo warranty for 12 months from the date of its original purchase.

Extend Your Warranty

Extend your warranty by registering your new appliance on our website

<https://dreocom/warranty>.

The warranty will not apply in cases of:

1. Accident, misuse, or repairs performed by unauthorized personnel.
2. Any unit that has been tampered with or used for commercial purposes.
3. Normal wear and tear of wearable parts.
4. Use of force, damage caused by external influences.
5. Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
6. Partially or completely dismantled appliances.
7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Dreo.

We can only provide after-sales service for products that are sold by Dreo or Dreo authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.



(888) 520-3736



support@dreocom



www.dreocom

Mon - Fri, 9:00 am-5:00 pm PST/PDT

FCC STATEMENT



This device complies with Part 15 of the FCC Rules.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Rev_1.0_EN



www.dreo.com



Shenzhen Hesung Innovation
Technology Co., LTD



26F, Bldg A7, Creative City, Shenzhen, China

MADE IN CHINA



LISTED
E219869

