


DREO

Tower Fan
مروحة عمودية
307

USER MANUAL

مدخست سمل ا لي لد

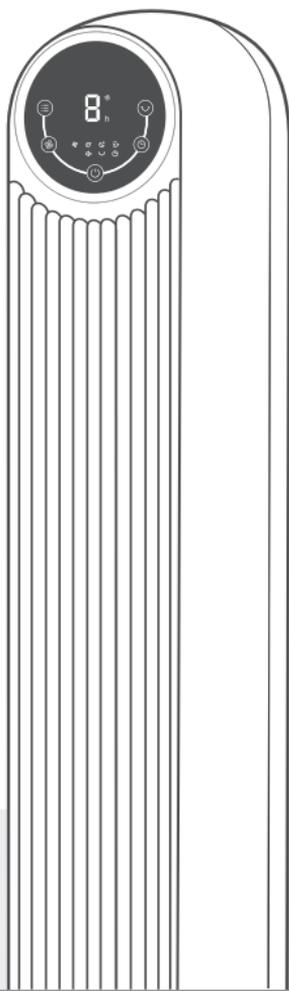

”

Thanks for Choosing **DREO!**

Your support means the world to us.
We hope you enjoy our product as much
as we did creating it.

”

شكراً لاختياري !DREO

دعمكم يعني لنا الكثير.
بمن تَجناكم استمتعتنا نحن بصنع.
نأمل أن تستمتعوا

LANGUAGES

English _____ 1-10

20-11 _____ العربية

CONTENTS

01

ASSEMBLING YOUR
TOWER FAN

1-3

02

KNOWING YOUR
TOWER FAN

4-5

03

USING YOUR
TOWER FAN

6-7

04

CLEANING AND
MAINTENANCE

8-9

05

TROUBLESHOOTING

10


ASSEMBLING YOUR TOWER FAN

01

Assembly Instructions


When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

1

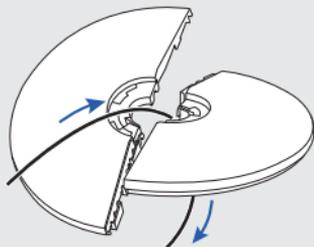


Run the cord through the center hole of the two base halves.

2

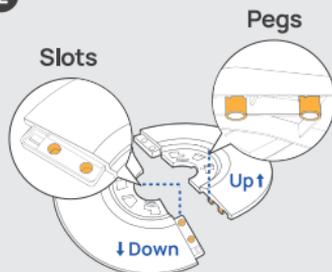


Keep the two base halves upside down and hold them in a crossed position, then insert the pegs on one half onto the slots on the other

3

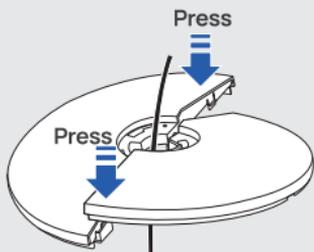


Press down on the edge until you hear a click to securely snap the two base halves together.

4

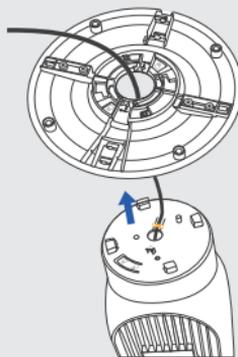


Attach the base to the fan bottom.

5

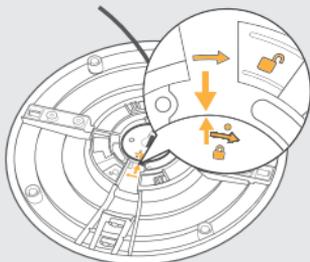


Make sure the arrows on both the base and fan bottom are aligned.

6

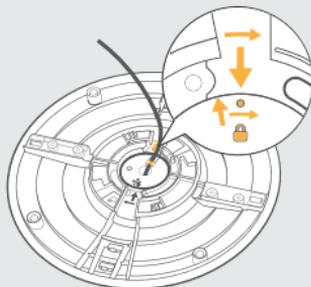

Turn the base clockwise until it clicks into place.


7

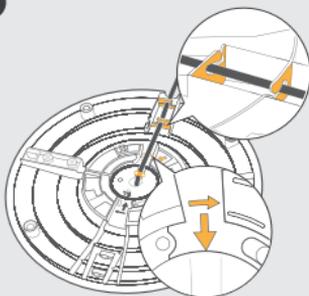


Thread the cord through all REAR cord keepers, then set the fan upright.

CAUTION

- Do not operate the tower fan if the base has not been installed.
- Make sure to thread the cord through all rear cord keepers.

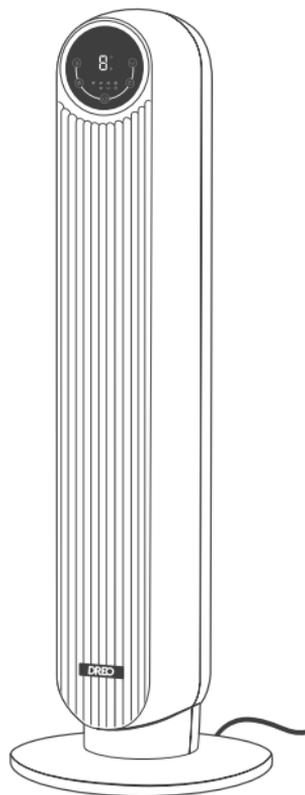

Package Contents

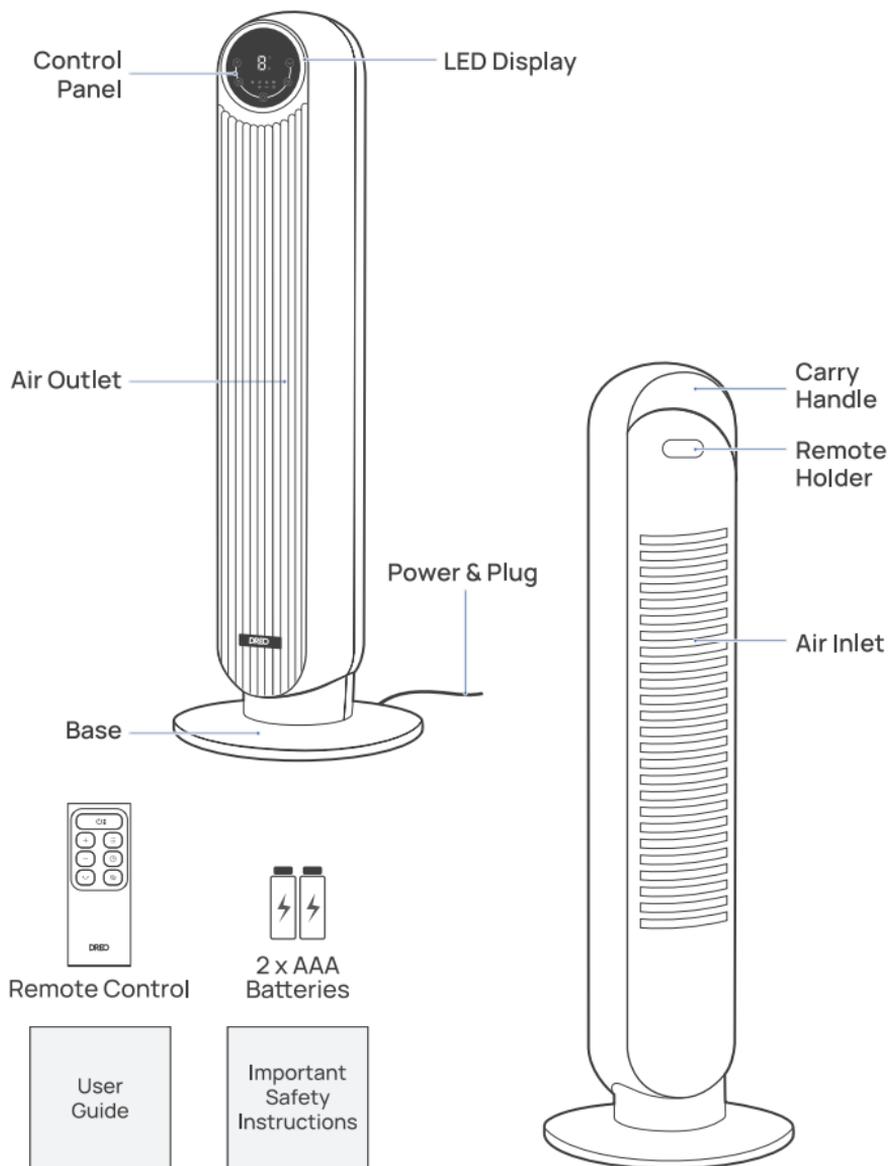

KNOWING YOUR TOWER FAN

02

Control Panel



Mode Button

Switch between Normal/Natural/Sleep/Auto Mode



Fan Speed Button

Adjust fan speed across 1- 8 levels



Power Button

Turn power on/off



Timer Button

Select to set a timer (0-8h)



Oscillation Button

Adjust airflow direction

LED Display



Fan Speed/ Timer Hour



Normal Mode



Natural Mode



Sleep Mode



Auto Mode



Mute



Oscillation




Timer



NOTE:

- Display will turn off after 1 minute (after 5 seconds in sleep mode).
- Wake up the display with any button.
- Display will not turn off when the auto on timer is enabled.

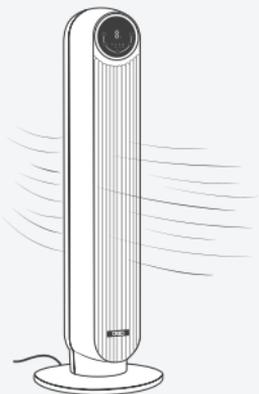

Getting the Most out of Your Tower Fan

1. It's not an air conditioner.
2. Remove any tall obstacles that might block the airflow from the fan.
3. Combine with your AC unit to get cooler air throughout the room.
4. Position the tower fan closer to you to get more direct airflow.
5. Place a bucket of ice in front of the fan for an extra cooling boost.

USING YOUR TOWER FAN

03

Working Modes



Sleep Mode (Mute Auto On)

Balance comfort and noise by automatically decreasing fan speed as you fall sleep.

If the fan speed is 4 or higher, it will decrease two times at most, one speed every 30 minutes, then it will remain constant.

If the fan speed is 3 or lower, it will remain constant.



Auto Mode

Fan speed adapts to the ambient temperature.



Normal Mode

Fan runs at the constant speed.



Natural Mode

Fan runs at alternating speeds.

Additional Features



Timer

When the fan is ON/OFF, touch the timer button repeatedly to set a timer (1h-8h). When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: Display will return to fan speed after 3 seconds.



Mute


Long press the  or press  on the remote control to turn on/off the button sounds.



Memory


If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.

Remote Control

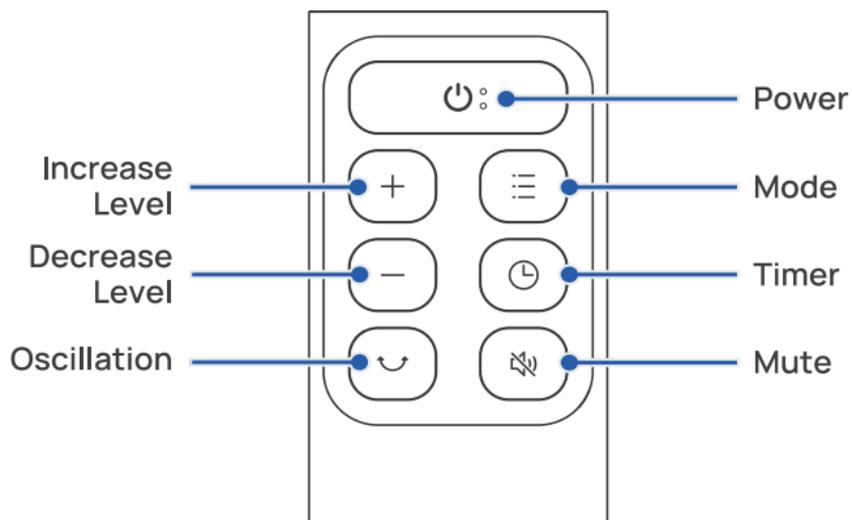

CLEANING AND MAINTENANCE


04

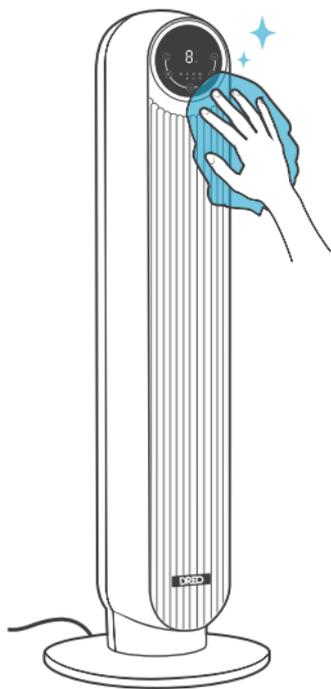

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Base

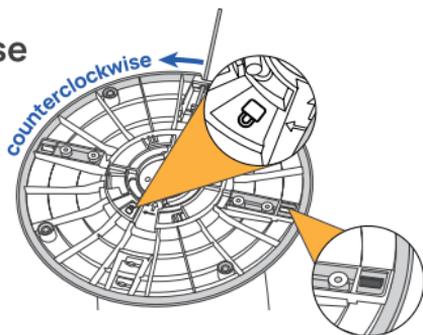

Press on the lock sign here and rotate counterclockwise to release the base from the fan, then press the tabs on the edges to detach the base halves from each other.

CAUTION



1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.


Rear Grille



WARNING


Turn off the appliance and unplug before any cleaning and maintenance.

1

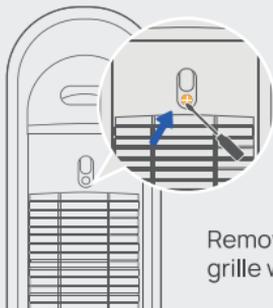


Remove the screw on the top of the rear grille with a Philips screwdriver.

2

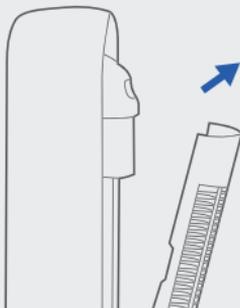

Lift up the grille and pull it out.

3

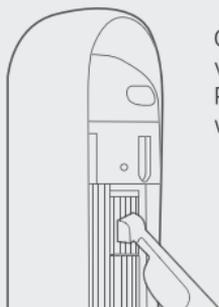

Clean the dust on blades using a vacuum cleaner or air duster.
Rinse the rear grille under running water with a clean, damp cloth.



4

Dry up, then install the grille and the screw back by following the reverse order of disassembly.

My appliance won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the appliance.

My appliance is shaky and wobbling!

1. Place the appliance on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in page 1. Note that the power cord must be run through all rear keepers.

My appliance is making vibration and noise!

1. Place the appliance on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support (see page 21).

املحتويات

01

تجميع المروحة
العمودية

13-11

02

تعرف على منتجك

15-14

03

كيفية استخدام منتجك

17-16

04

التنظيف والصيانة

19-18

05

استكشاف الأعطال
وإصلاحها


20

01


تجميع المروحة العمودية

تعليمات التجميع

عند استخدام المنتج لأول مرة، قم بإزالة الأغلفة وقم بتثبيت الأجزاء باتباع الخطوات التالية.

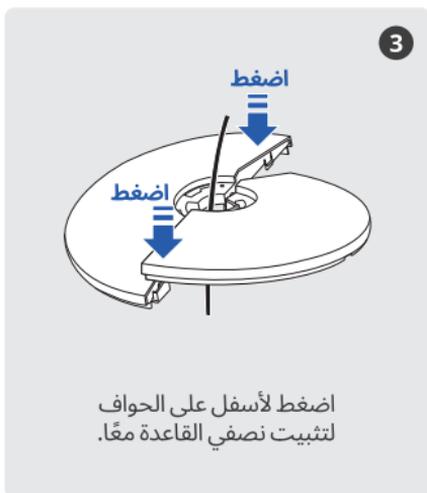


6

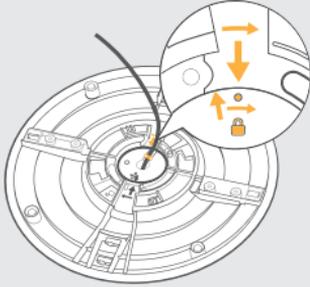


قم بلف القاعدة في اتجاه عقارب الساعة حتى تثبت في مكانها.

5

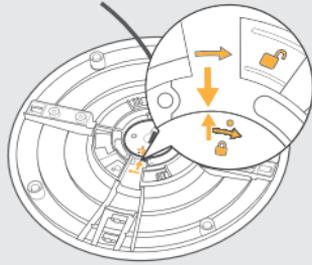


تأكد من محاذاة الأسهم على كل من القاعدة والجزء السفلي للمروحة.

7

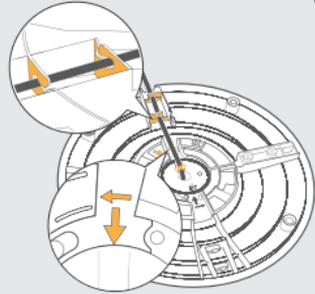


قم بتمرير السلك عبر جميع الحوامل الخلفية للسلك، ثم قم بوضع المروحة في وضعها المستقيم.

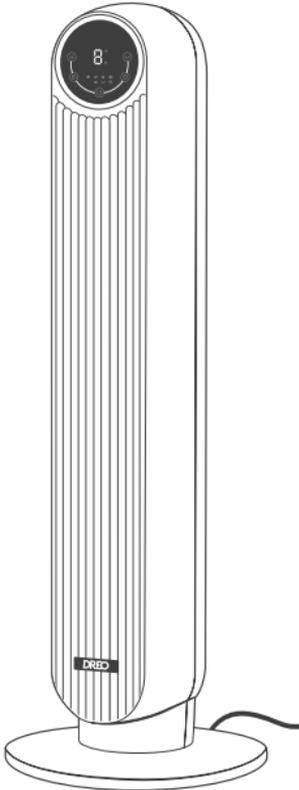

تنبيه !

- تجنب القيام بتشغيل المروحة العمودية إذا لم يتم تثبيت القاعدة.
- تأكد من تمرير السلك عبر جميع الحوامل الخلفية للسلك.

محتويات العلبة

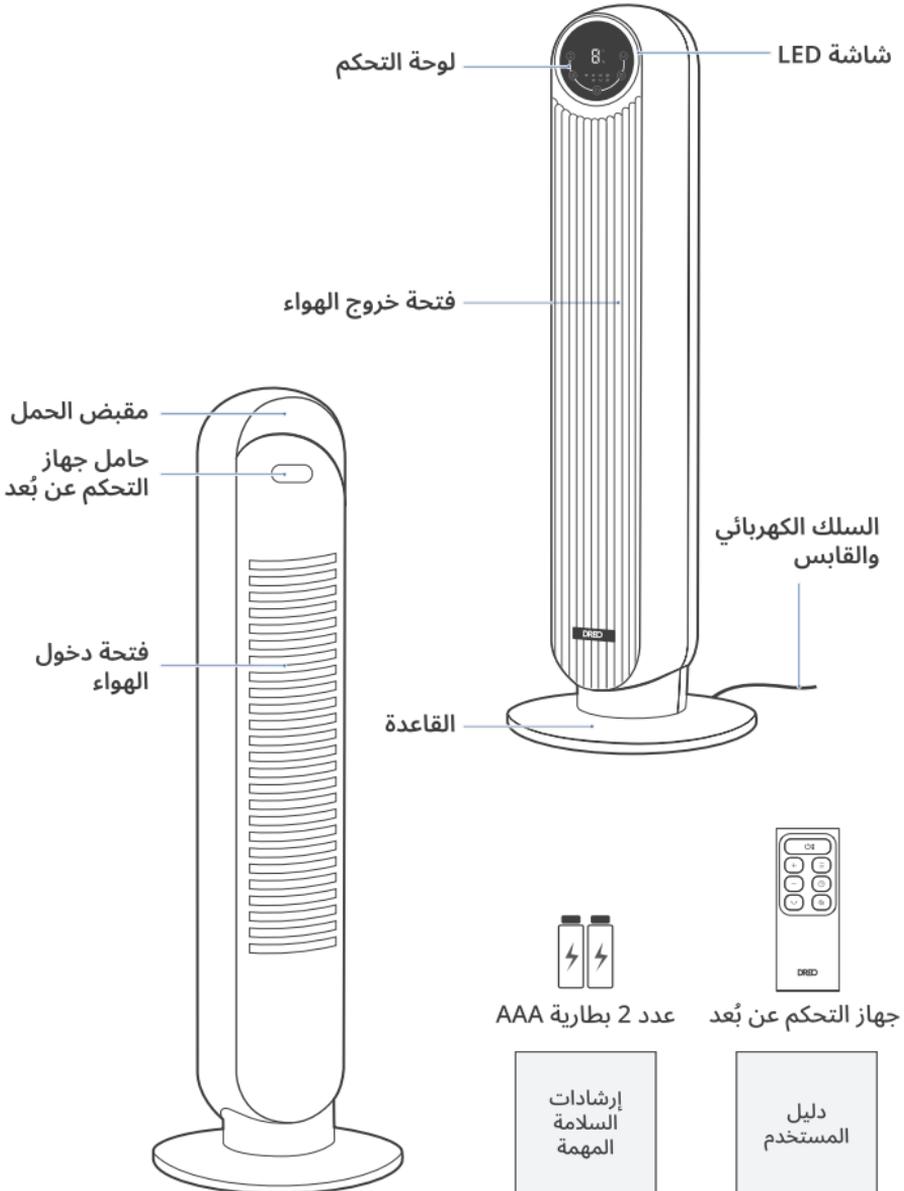

02

تعرف على منتجك

لوحة التحكم

زر الوضع
التبديل بين الوضع العادي/الطبيعي/النوم/التلقائي

زر سرعة المروحة
ضبط سرعة المروحة عبر 1-8 مستوى

زر الطاقة
تشغيل أو إيقاف الطاقة

زر المؤقت
حديد وقت تشغيل المؤقت (0-8 ساعة)

زر التذبذب
ضبط اتجاه تدفق الهواء





سرعة المروحة / ساعة المؤقت

AUTO

الوضع التلقائي



وضع النوم



الوضع الطبيعي



الوضع العادي



المؤقت



التذبذب



كتم الصوت


ملاحظة:

- سيتم إيقاف تشغيل الشاشة تلقائيًا بعد دقيقة واحدة (بعد 5 ثوانٍ في وضع النوم).
- قم بتنشيط الشاشة بأي زر.
- لن يتوقف تشغيل المروحة عند تمكين وظيفة مؤقت التشغيل.



الاستفادة القصوى من المروحة العمودية

1. الجهاز ليس مكيف هواء.
2. قم بإزالة أي عوائق طويلة قد تعيق تدفق الهواء من المروحة.
3. قم بدمج المروحة مع وحدة التكييف للحصول على هواء أكثر برودة في جميع أنحاء الغرفة.
4. ضع المروحة بالقرب منك للحصول على تدفق هواء مباشر أكثر.
5. ضع دلوًا من الثلج أمام المروحة لتعزيز التبريد.

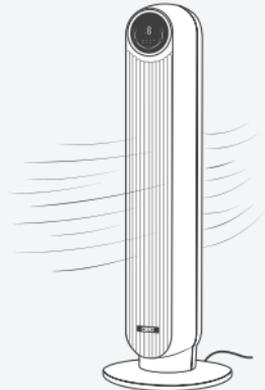

03

كيفية استخدام منتجك

أوضاع العمل

الوضع التلقائي

تتكيف سرعة المروحة مع درجة الحرارة المحيطة.



الوضع العادي

تعمل المروحة بسرعة ثابتة



الوضع الطبيعي

تعمل المروحة بسرعات متناوبة.



وضع النوم

(كتم الصوت التلقائي)



يحقّق التوازن بين الراحة والبضوء عن طريق تقليل سرعة المروحة تلقائياً أثناء النوم. إذا كانت سرعة المروحة 4 أو أعلى، فإنها ستقل مرتين كحد أقصى، بمقدار سرعة واحدة كل 30 دقيقة، ثم ستظل ثابتة. إذا كانت سرعة المروحة 3 أو أقل، فستظل ثابتة.

مميزات إضافية

المؤقت

عند تشغيل/إيقاف المروحة، اضغط على زر المؤقت بشكل متكرر لضبط المؤقت (1-8 ساعات). عند انتهاء المؤقت، ستتوقف/تبدأ المروحة في العمل تلقائياً. للإلغاء، اضغط الوقت على 0 ساعة. **ملاحظة:** ستعود الشاشة إلى عرض سرعة المروحة بعد 3 ثوانٍ.



كتم الصوت

اضغط مطولاً على زر  أو اضغط على زر  في جهاز التحكم عن بُعد لإيقاف تشغيل أصوات الأزرار.




الذاكرة

إذا تم إيقاف تشغيل المروحة أو فصلها عن الكهرباء، ستستأنف العمل بالإعدادات السابقة (باستثناء إعداد المؤقت) عند إعادة التشغيل.



جهاز التحكم عن بُعد

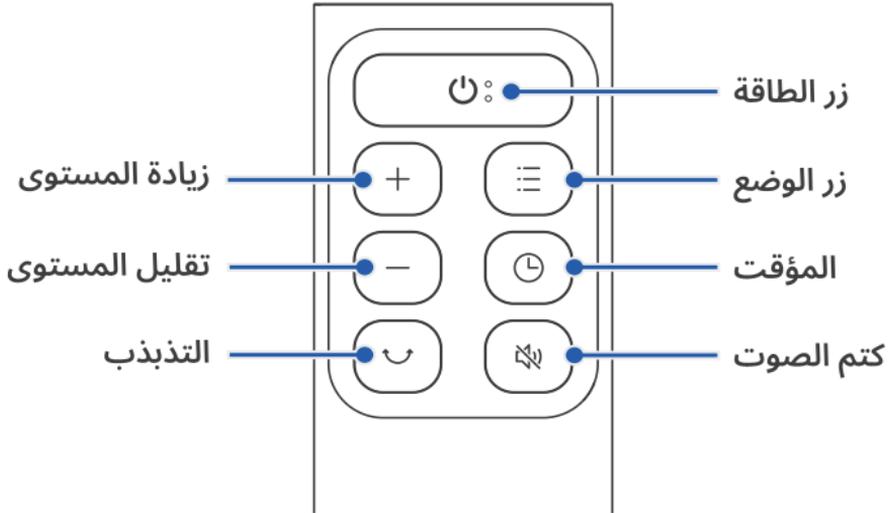


04


التنظيف والصيانة

السطح الخارجي

امسح الغبار برفق باستخدام قطعة قماش ناعمة وجافة.

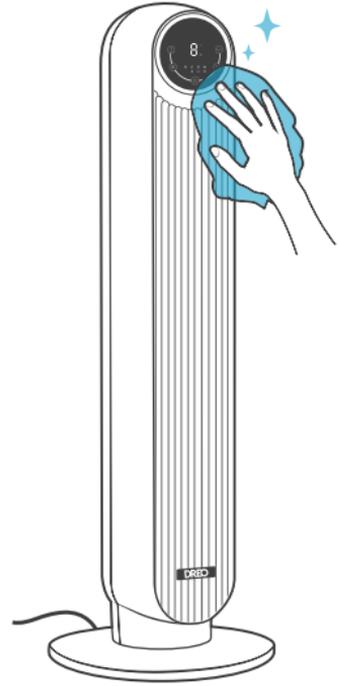

القاعدة

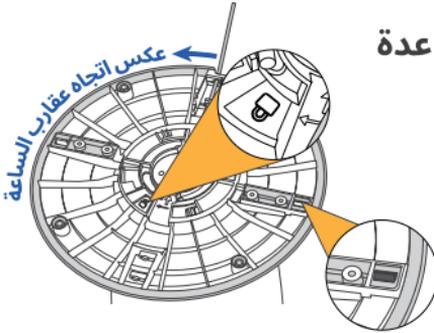

اضغط على علامة القفل هنا ولف في عكس اتجاه حركة عقارب الساعة لتحرير القاعدة من المروحة، ثم اضغط على الألسنة في الحواف لفصل كل من نصفي القاعدة عن الآخر.

تنبيه

1. افصل المروحة دائماً عن الكهرباء قبل أي عملية تنظيف أو صيانة لتجنب خطر الحريق، أو الصدمة الكهربائية، أو إصابة الأشخاص.
2. تجنب القيام بغمر المنتج في الماء أو السماح بدخول الماء إلى مبيت المحرك.
3. تجنب استخدام أي مواد كيميائية عند تنظيف المروحة.
4. قم بتخزين المروحة في مكان بارد وجاف وقم بتغطيتها لحمايتها من الغبار.




صيانة الشبكة الخلفية

تحذير:


قم دائمًا بإيقاف تشغيل المنتج وفصله عن الكهرباء قبل إجراء أي عمليات تنظيف أو صيانة.




1 استخدم مفك مسامير من نوع فيليبس لإزالة المسمار الموجود أعلى الشبكة الخلفية.

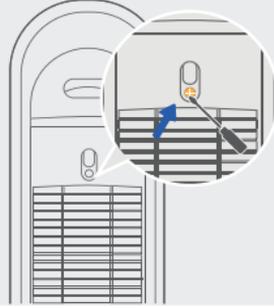

2 ارفع الشبكة لأعلى ثم اسحبها للخارج.

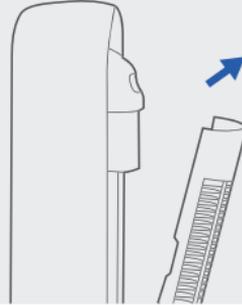

3 نظف الغبار على الشفرات باستخدام مكنسة كهربائية أو منفاخ هواء. اغسل الشبكة الخلفية تحت الماء الجاري باستخدام قطعة قماش نظيفة ورطبة.

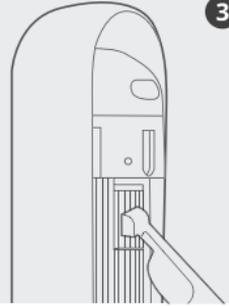

4 جفف الشبكة، ثم أعد تركيب الشبكة والمسمار باتباع الترتيب العكسي للتفكيك.

المروحة لا تعمل!

تأكد من توصيل السلك بمقبس كهربائي يعمل وأن الجهد الكهربائي يتوافق مع الجهد المذكور على المروحة.

!gnilbbow dna ykachs si ecnailppa yM

1. ضع المروحة على سطح مستو ومتوازن.
2. قد يتسبب التثبيت غير الصحيح أيضًا في الاهتزاز. راجع تعليمات التجميع في الصفحة 11. تأكد من أن السلك الكهربائي يمر عبر جميع الحوامل الخلفية.

!esion dna noitarbiv gnikam si ecnailppa yM

1. ضع المروحة على سطح مستو ومتوازن.
2. تأكد من عدم إدخال أي شيء في مدخل ومخرج الهواء.

إذا استمرت المشكلة أو لم تكن مدرجة، الرجاء الاتصال بدعم العملاء (انظر الصفحة 21).

Model No./رقم الطراز: DR-HTF007
Rev_UAE_1.0

Reach out to us, it's easy!
تواصل معنا، فالأمر سهل!



support@dreo.com



www.dreo.com

www.dreo.com

Looking for help?
هل تبحث عن مساعدة؟

Contact us to get expert support.
اتصل بنا للحصول على دعم الخبراء



support@dreo.com



www.dreo.com