


DREO

Tower Fan
مروحة عمودية
518

USER MANUAL

مدخستسملا ليلد

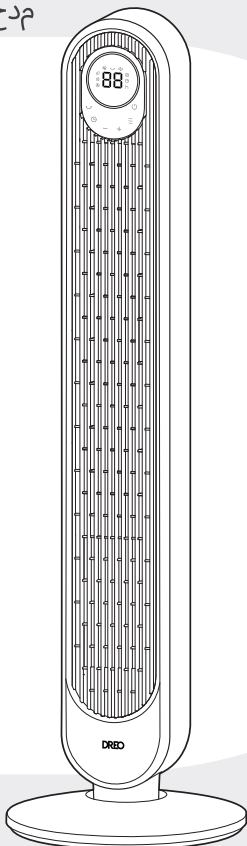

”

Thanks for Choosing **DREO!**

Your support means the world to us.
We hope you enjoy our product as much
as we did creating it.

”

شكراً لاختيارك **IDREO**

دعمكم يعني لنا الكثير.
بمن تَجْنَاكم استمتعنا نحن بصنعهم.
نأمل أن تستمتعوا

LANGUAGES

English ————— 1-12

24-13 ————— العربية

CONTENTS

01

ASSEMBLING YOUR
TOWER FAN

1-3

02

KNOWING YOUR
TOWER FAN

4-5

03

USING YOUR
TOWER FAN

6-8

04

CLEANING AND
MAINTENANCE

9-11

05

TROUBLESHOOTING

12


ASSEMBLING YOUR TOWER FAN

01

Assembly Instructions


When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

1

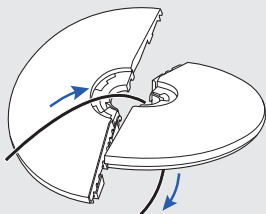


Run the cord through the center hole of the two base halves.

2

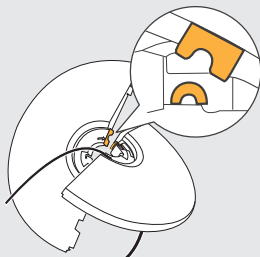


Intersect the two base halves diagonally. Match the arched cutout with the arched support on the base. Then, hook them together.

3

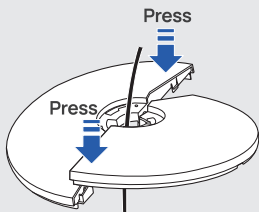


Press down on the edge until you hear a **click** to securely snap the two base halves together.

4

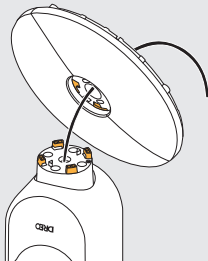


Attach the base to the fan bottom.

5

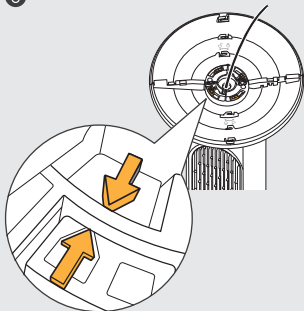


Make sure the arrows on both the base and fan bottom are aligned.

6

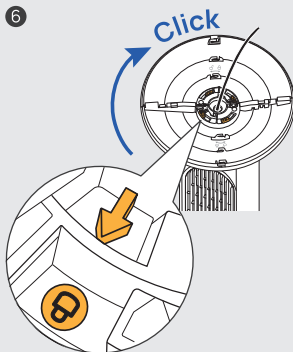

Turn the base clockwise until it **clicks** into place.

7

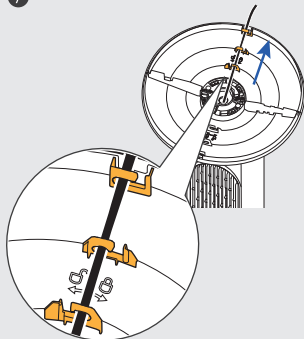


Thread the cord through all REAR cord keepers, then set the fan upright.




CAUTION

- Do not operate the tower fan if the base has not been installed.
- Make sure to thread the cord through all rear cord keepers.

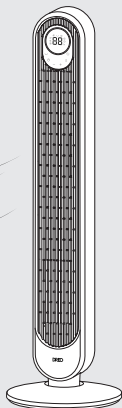

Package Contents

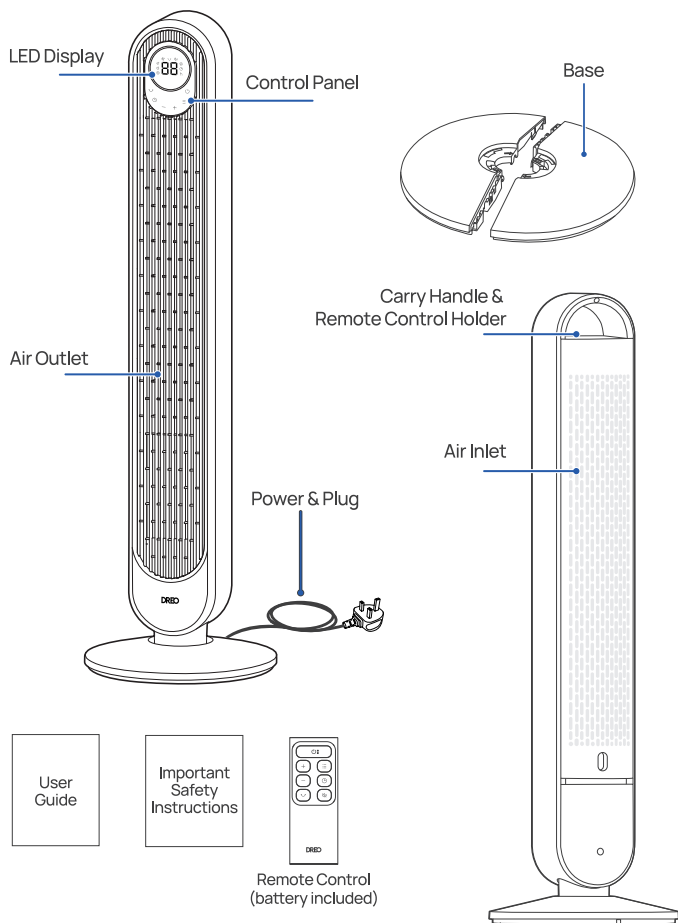

KNOWING YOUR TOWER FAN

02

Control Panel



Power Button

- Turn power on/off



Mode Button

- Switch between Normal/Natural/Sleep/Auto Mode
- Long press for 3 seconds to mute/unmute



Increase Button

- 1-9 speed levels



Decrease Button

- 1-9 speed levels



Timer Button


- Select to set a timer (0-12h)



Oscillation Button

- Adjust airflow direction

LED Display

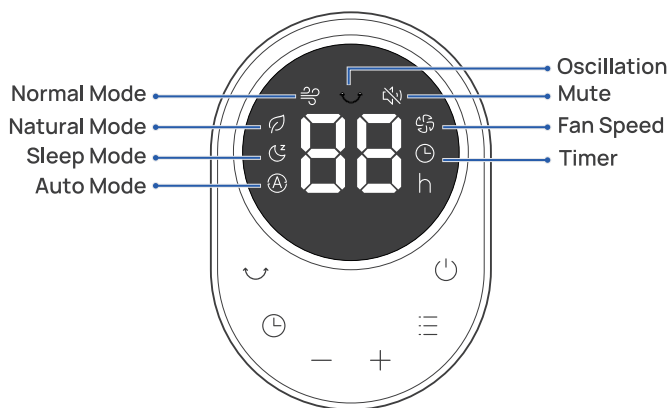

USING YOUR TOWER FAN

03

Working Modes



Normal Mode

Fan runs at the fixed speed.



Natural Mode

Fan speed goes up and down intermittently to replicate the natural breeze.



Auto Mode

Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.



Sleep Mode

(Mute Auto On)

Balance comfort and noise by automatically decreasing fan speed as you fall sleep.

If the fan speed is higher than 3, it will decrease two times, one speed every 30 minutes, then it will remain constant.

If the fan speed is 3 or below it will remain constant.

Additional Features



Mute

Long press  or press  on the remote control to turn on/off the button sounds.



Timer

When the fan is ON/OFF, touch the timer button repeatedly to set a timer (1-12h). When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: Display will return to fan speed after 3 seconds.



Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the timer setting) when it is turned ON again.




Display Auto Off


- Display turns off after 1 minute (after 5 seconds in sleep mode).
- Wake up the display with any button.

Getting the Most out of Your Tower Fan

1. Remove any tall obstacles that might block the airflow from the fan.
2. Combine with your AC unit to get cooler air throughout the room.
3. Position the tower fan closer to you to get more direct airflow.
4. Place a bucket of ice in front of the fan for an extra cooling boost.

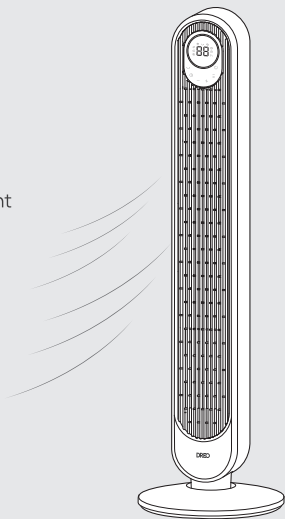


Remote Control

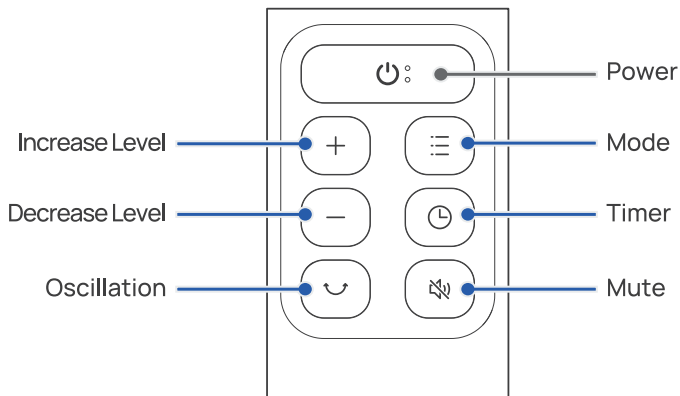

CLEANING AND MAINTENANCE

04

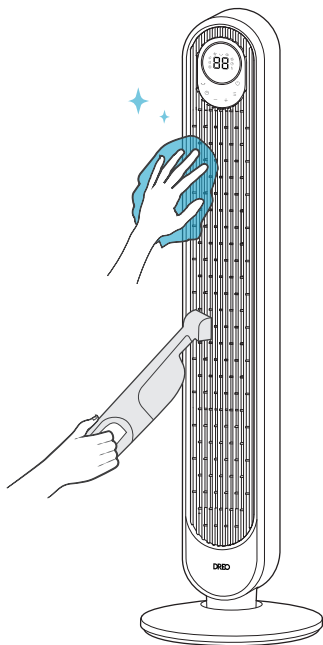

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Grilles & Blades

Remove the dust using a vacuum or air duster.

Base

The base can be disassembled in the reverse order of assembly.

CAUTION



1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.


Rear Grille



WARNING


Turn off the appliance and unplug before any cleaning and maintenance.

1

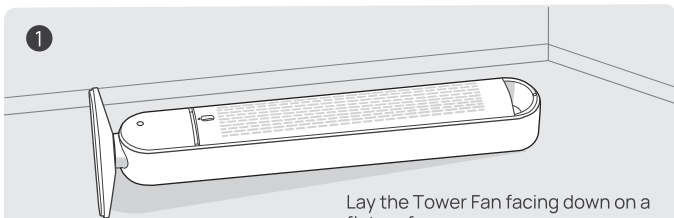


Lay the Tower Fan facing down on a flat surface.

2

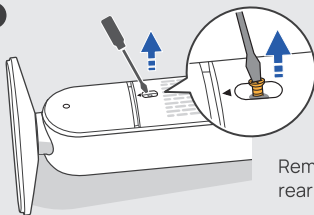


Remove the screw at the bottom of the rear grille with a Phillips screwdriver.

3

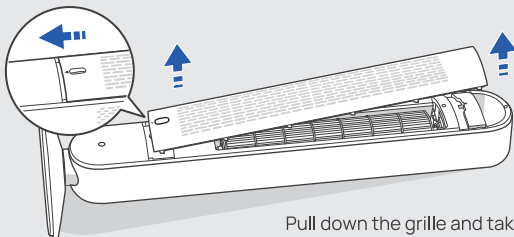


Pull down the grille and take it out.

4

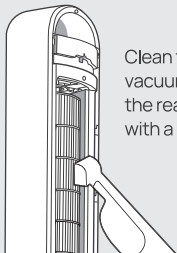

Clean the dust on blades using a vacuum cleaner or air duster. Rinse the rear grille under running water with a clean, damp cloth.

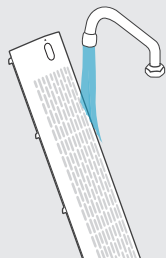

5

Dry up, then install the grille and the screw back by following the reverse order of disassembly.

My appliance won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the appliance.

My appliance is shaky and wobbling!

1. Place the appliance on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in page 1. Note that the power cord must be run through all rear keepers.

My appliance is making vibration and noise!

1. Place the appliance on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support (see page 25).

املحتويات

01

تجميع المروحة
العمودية

15-13

02

تعرف على منتجك

17-16

03

كيفية استخدام
منتجك

20-18

04

التنظيف والصيانة

23-21

05


استكشاف الأعطال
وإصلاحها

24


تجميع المروحة العمودية

تعليمات التجميع


عند استخدام المنتج لأول مرة، قم بإزالة الأغلفة وقم بتثبيت الأجزاء باتباع الخطوات التالية.

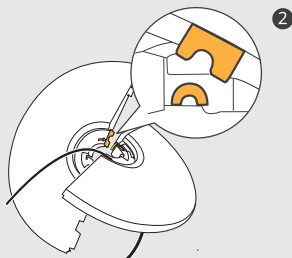


قم بمطابقة القطع المقوس مع الدعامة المقوسة على القاعدة. ثم قم بتثبيتهما معًا.

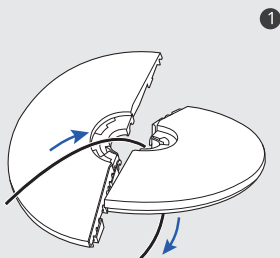





مرر السلك عبر منتصف فتحة نصف القاعدة.

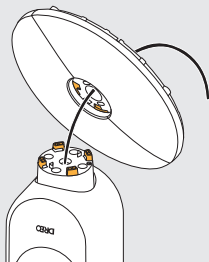


ثبّت القاعدة بالجهة السفلية للمروحة.

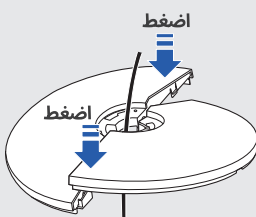

اضغط لأسفل على الحواف لتثبيت نصف القاعدة معًا.

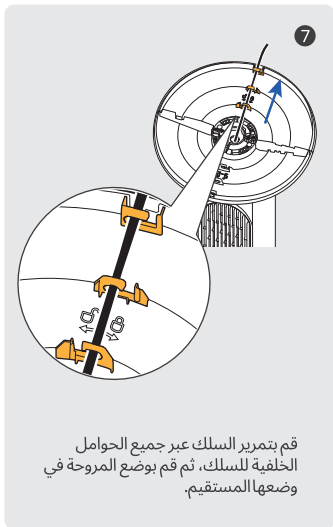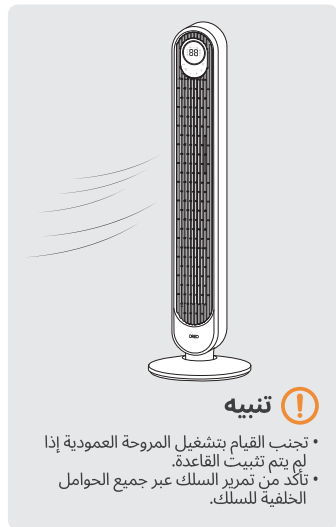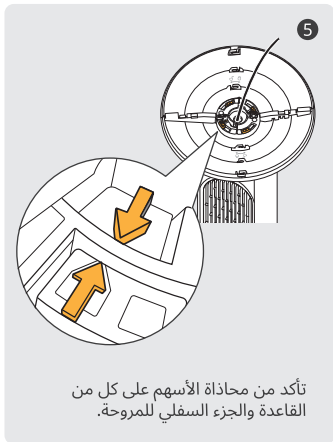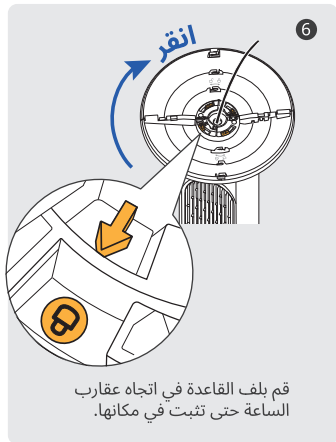

محتويات العلبة

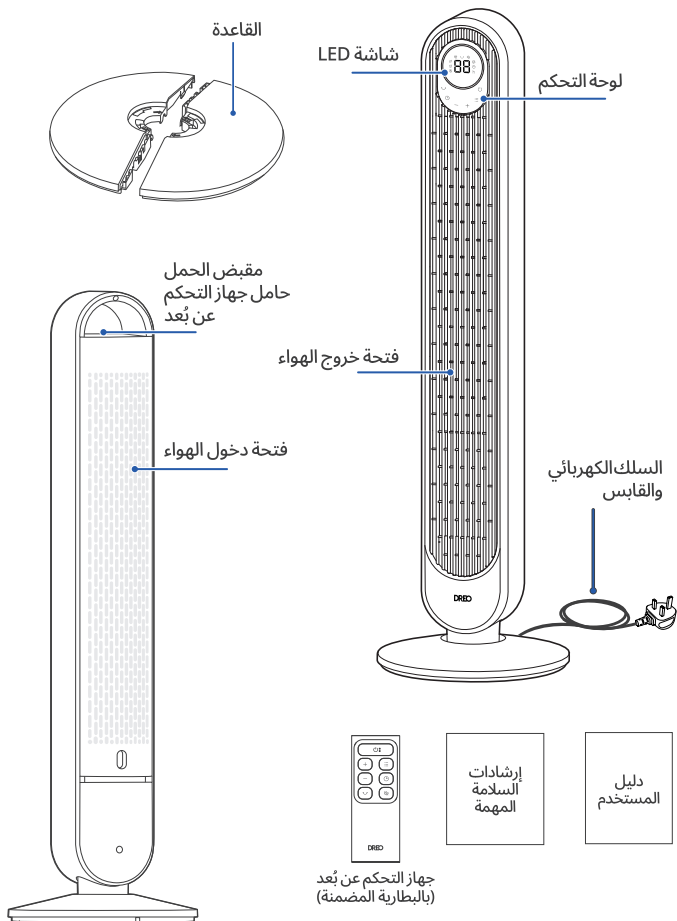

لوحة التحكم

زر الطاقة

- تشغيل أو إيقاف الطاقة



زر الوضع

- التبديل بين الوضع العادي/الطبيعي/النوم/التلقائي
- اضغط لفترة طويلة لمدة 3 ثوانٍ لكتم/إلغاء كتم الصوت.



زر الزيادة

- 1-9 مستويات السرعة



زر التقليل

- 1-9 مستويات السرعة



زر المؤقت

- حديد وقت تشغيل المؤقت (0-12 ساعة)




زر التذبذب

- ضبط اتجاه تدفق الهواء



شاشة LED

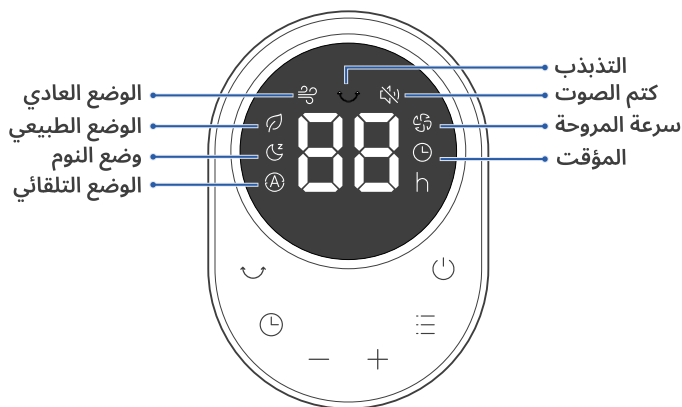

03

كيفية استخدام منتجك

أوضاع العمل

وضع النوم (كتم الصوت التلقائي)



يحقق التوازن بين الراحة والضوضاء عن طريق تقليل سرعة المروحة تلقائيًا أثناء النوم.

إذا كانت سرعة المروحة 3 أو أعلى، فإنها ستقل مرتين كحد أقصى، بمقدار سرعة واحدة كل 03 دقيقة، ثم ستظل ثابتة. إذا كانت سرعة المروحة 3 أو أقل، فستظل ثابتة.

الوضع العادي تعمل المروحة بسرعة ثابتة



الوضع الطبيعي

تتغير سرعة المروحة بشكل متقطع لمحاكاة التنسيم الطبيعي.



الوضع التلقائي

تزيد المروحة سرعتها تلقائيًا عندما ترتفع درجة حرارة الغرفة وتقلل السرعة عندما تنخفض الحرارة.



ميزات إضافية

كتم الصوت

اضغط مطولاً على زر (≡) أو اضغط على زر (🔇) في جهاز التحكم عن بُعد لإيقاف تشغيل أصوات الأزرار.



المؤقت

عند تشغيل/إيقاف المروحة، اضغط على زر المؤقت بشكل متكرر لضبط المؤقت (1-21 ساعات). عند انتهاء المؤقت، ستتوقف/تبدأ المروحة في العمل تلقائيًا. للإلغاء، اضغط الوقت على 0 ساعة. ملاحظة: ستعود الشاشة إلى عرض سرعة المروحة بعد 3 ثوانٍ.



الذاكرة

إذا تم إيقاف تشغيل المروحة أو فصلها عن الكهرباء، ستستأنف العمل بالإعدادات السابقة (باستثناء إعداد المؤقت) عند إعادة التشغيل.




إيقاف تشغيل الشاشة التلقائي

سيتم إيقاف تشغيل الشاشة تلقائيًا بعد دقيقة واحدة (بعد 5 ثوانٍ في وضع النوم).
قم بتنشيط الشاشة بأي زر.



الاستفادة القصوى من المروحة العمودية

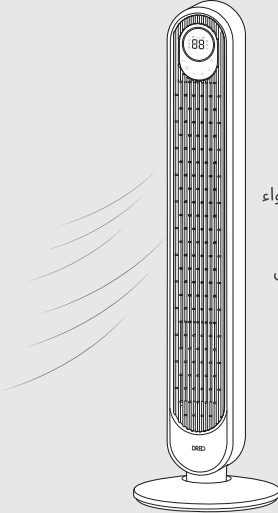


1. قم بإزالة أي عوائق طويلة قد تعيق تدفق الهواء من المروحة.

2. قم بدمج المروحة مع وحدة التكييف للحصول على هواء أكثر برودة في جميع أنحاء الغرفة.

3. ضع المروحة بالقرب منك للحصول على تدفق هواء مباشر أكثر.

4. ضع دلوًا من الثلج أمام المروحة لتعزيز التبريد.

جهاز التحكم عن بُعد

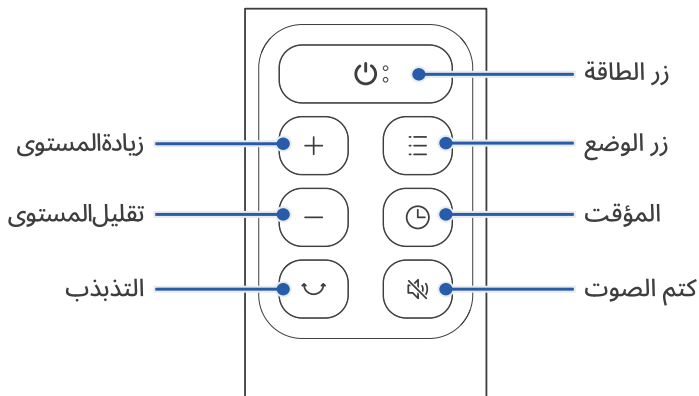

السطح الخارجي


امسح الغبار برفق باستخدام قطعة قماش ناعمة وجافة.

الشبكات والشفرات

قم بإزالة الغبار باستخدام مكنسة كهربائية أو أداة نفخ الهواء.

القاعدة

يمكن تفكيك القاعدة باتباع الخطوات العكسية لخطوات التجميع.

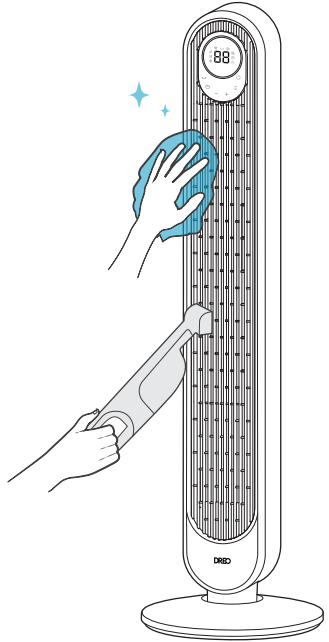

تنبيه


1. افصل المروحة دائمًا عن الكهرباء قبل أي عملية تنظيف أو صيانة لتجنب خطر الحريق، أو الصدمة الكهربائية، أو إصابة الأشخاص.
2. تجنب القيام بغمر المنتج في الماء أو السماح بدخول الماء إلى مبيت المحرك.
3. تجنب استخدام أي مواد كيميائية عند تنظيف المروحة.
4. قم بتخزين المروحة في مكان بارد وجاف وقم بتغطيتها لحمايتها من الغبار.




صيانة الشبكة الخلفية

تحذير:


قم دائمًا بإيقاف تشغيل المنتج وفصله عن الكهرباء قبل إجراء أي عمليات تنظيف أو صيانة.

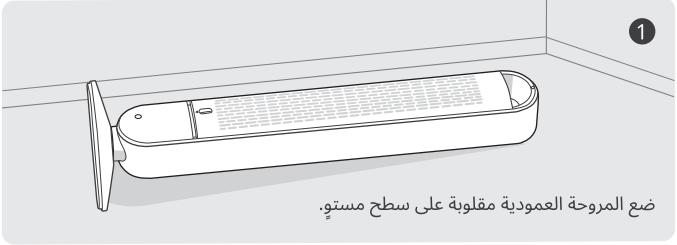

ضع المروحة العمودية مقلوبة على سطح مستو.

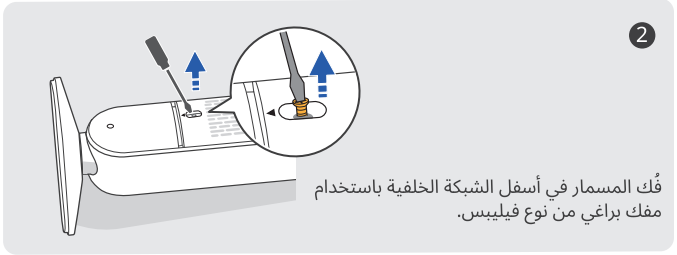


فك المسمار في أسفل الشبكة الخلفية باستخدام مفك براغي من نوع فيليبس.

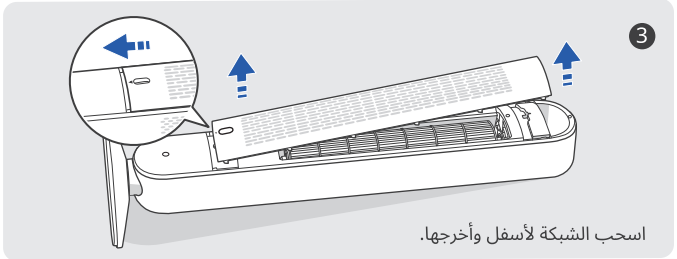

اسحب الشبكة لأسفل وأخرجها.



نظف الغبار على الشفرات باستخدام مكنسة كهربائية أو منفاخ هواء، اغسل الشبكة الخلفية تحت الماء الجاري باستخدام قطعة قماش نظيفة ورطبة.

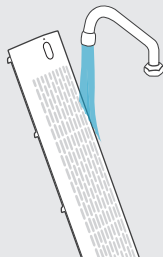

4

جفف الشبكة، ثم أعد تركيب الشبكة والمسمار باتباع الترتيب العكسي للتفكيك.

5

المروحة لا تعمل!

تأكد من توصيل السلك بمقبس كهربائي يعمل وأن الجهد الكهربائي يتوافق مع الجهد المذكور على المروحة.

المروحة تهتز أو تتمايل!

1. ضع المروحة على سطح مستوٍ ومتوازن.
2. قد يتسبب التثبيت غير الصحيح أيضًا في الاهتزاز. راجع تعليمات التجميع في الصفحة 13. تأكد من أن السلك الكهربائي يمر عبر جميع الحوامل الخلفية.

المروحة تصدر اهتزازات أو ضوضاء!

1. ضع المروحة على سطح مستوٍ ومتوازن.
2. تأكد من عدم إدخال أي شيء في مدخل ومخرج الهواء.

إذا استمرت المشكلة أو لم تكن مدرجة، الرجاء الاتصال بدعم العملاء (انظر الصفحة 25).

Model No./رقم الطراز: DR-HTF018
Rev_UAE_1.0

Reach out to us, it's easy!
تواصل معنا، فالأمر سهل!



support@dreco.com



www.dreco.com

www.dreo.com

Looking for help? هل تبحث عن مساعدة؟

Contact us to get expert support.
اتصل بنا للحصول على دعم الخبراء



support@dreo.com



www.dreo.com